



# 2010 Chevrolet Camaro V6

## Bumper Grille

PART# 44611 (Brushed) 44612 - (Polished) 44613 - (Black) Bumper Grille




### Hardware

- 4 - 10-24 x 2" Bolts
- 4 - Brackets
- 4 - 10-24 U-clips

**1** Use supplied hardware and attach per illustration below (Fig A). Start by placing the supplied 10-24 x 2" phillips head bolts through the mounting tabs in billet grille. Next place the supplied U-clips on each of the brackets, u-clips go directly over the holes in brackets.

**2** Place billet grille into opening and center. Turn the brackets "HORIZONTAL", so that it passed through the stock plastic opening in stock grille shell. With billet grille in place use a regular screwdriver and rotate the brackets "VERTICAL" so that it catches the plastic in stock grille shell. Loosely tighten toggle bolts. Repeat process for remaining brackets. Make any necessary adjustments. Fully tighten without over tightening bolts.

Fig A

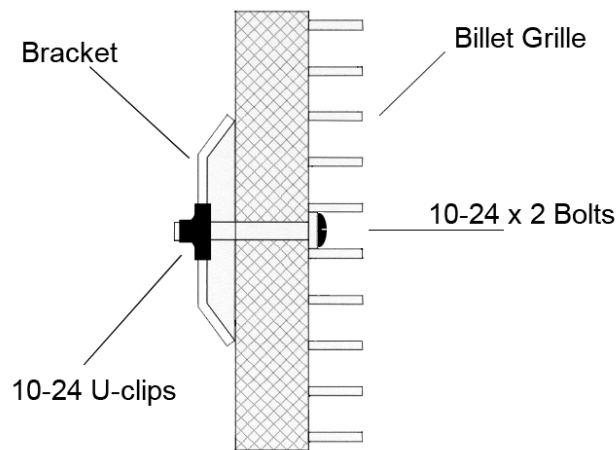

Completed Installation

For installation of billet grilles that require cutting of the stock shell, proper tools, knowledge and skill are needed. Carriage Works is not responsible for care & accuracy of the installation, only for Fit & Finish of its products. Use a qualified installer or contact original vendor for references to complete all instructions.

NOTE: Please adjust horizontal blades if irregular. This is the result of shipping and handling outside of Carriage Works control. Also Carriage Works Recommends applying a high quality automotive wax to maintain the original appearance.