


Installation instructions

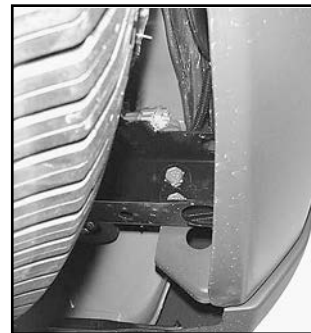

1. Locate tow vehicle's trailer harness connector. This harness is located under the vehicle, behind the rear bumper, on the passenger's side of the vehicle.

2. Remove protective cap from connector. Check to see that the mating surfaces of the connectors are free of dirt and clean if necessary.

3. Connect the Tow Plug Adapter end to the vehicle's connector. Be sure that the Tow Plug is fully inserted with locking tabs in place.

4. Test the installation with a test light or a trailer.

This unit is rated for **7.5** amps per circuit.