


Installation instructions

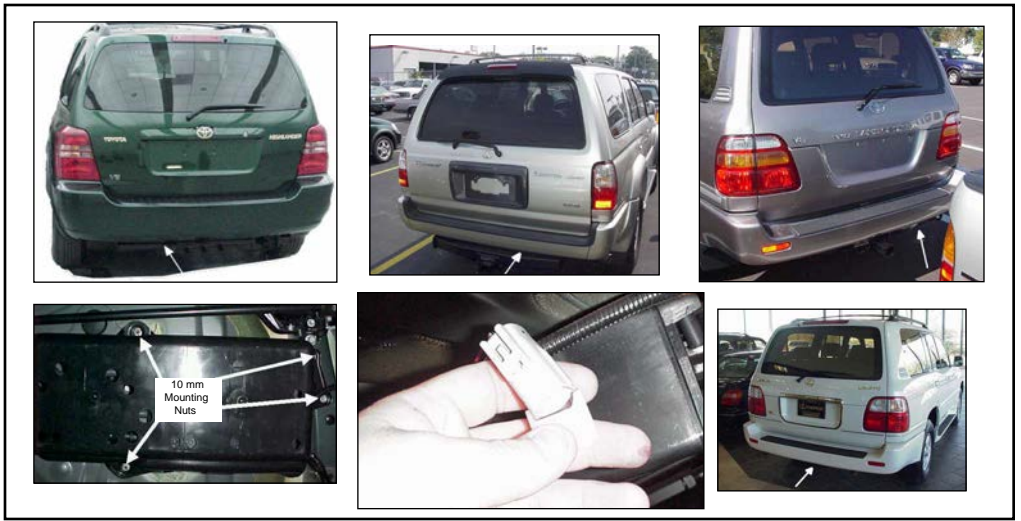

1. Locate the vehicle's factory tow harness connector behind the bumper. This harness will have a connector that will mate to the end of the tow plug. **Note:** On some vehicles, the tow harness will be located in a plastic covered box. temporarily remove box as shown to gain access.

2. Remove factory tow harness protective cap and check to see if the mating surface is clean and free of dirt, clean if necessary. Insert the tow plug into the connector.

3. Highlander & RX300: Locate vehicle's fuse block located on left hand side of the engine compartment. Place 20 amp fuse in are labeled "TOWING" if necessary.

4. Test the installation with a test light or a trailer.

5. Secure all loose wires with cable tie provided.

Note: This unit is rated for 7.5 amps per circuit.

