


## Installation Instructions

### T-Connector

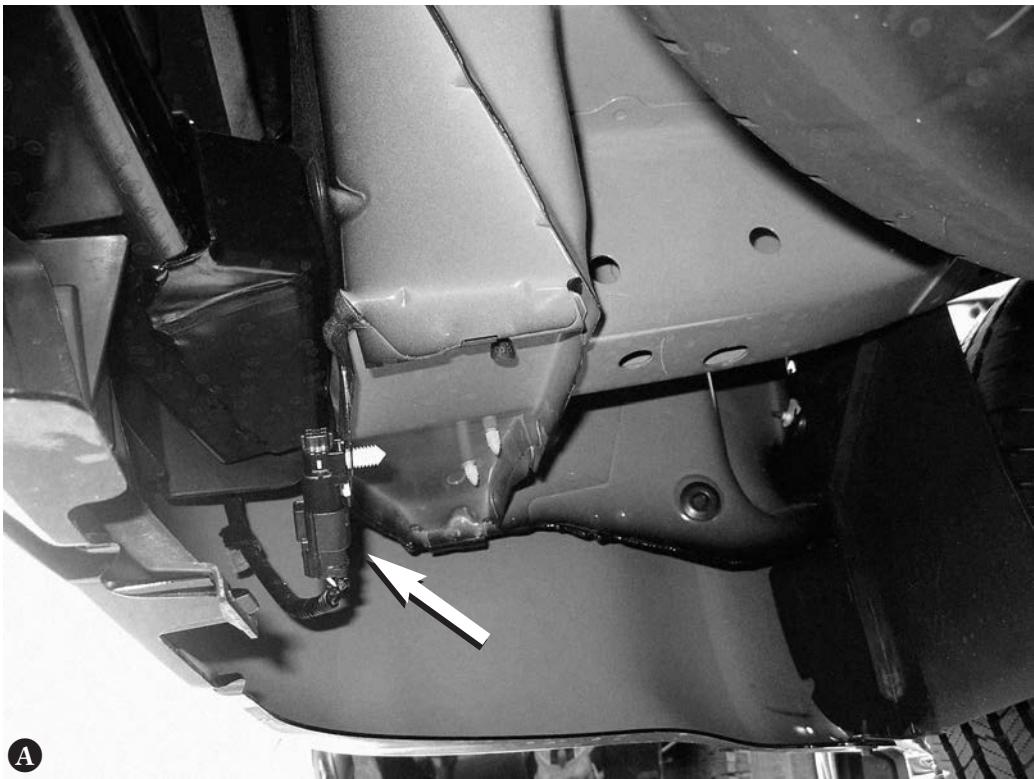

1. Locate tow vehicle's trailer harness connector. This harness is located under the vehicle, behind the rear bumper, on the driver's side of the vehicle **A**.
2. Remove protective cap from connector. Check to see that the mating surfaces of the connectors are free of dirt and clean if necessary **A**.
3. Insert the T-Connector into the vehicle's trailer plug harness. Be sure that the T-Connector is fully inserted with locking tabs in place **A**.

#### **⚠ WARNING**

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed. For initial test, reset vehicle electrical system by temporarily removing the key from the ignition.



**⚠ WARNING**  
Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light: (7.5 amps)
- Max. tail lights: (7.5 amps)

Read vehicle's owners manual & instruction sheet for additional information.