



# Installation Instructions


## T-Connector

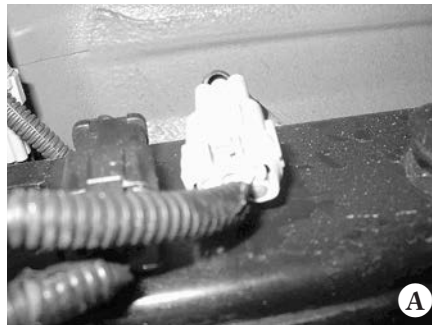

Pathfinder

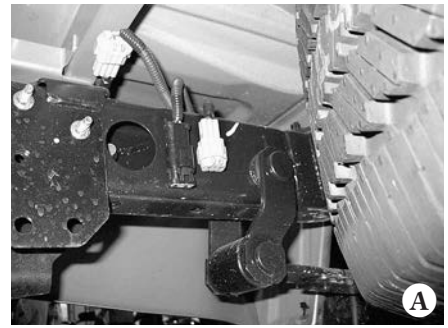

Frontier

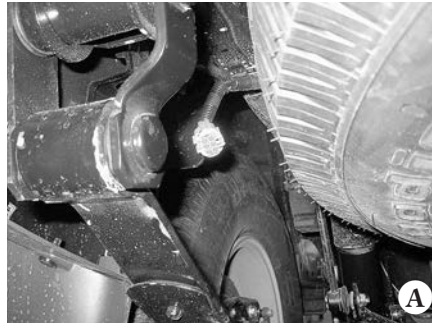

Xterra



B



1. Locate the tow vehicle's trailer harness connector. The gray 6-pin plug is located under the vehicle, behind the rear bumper on the driver's side, along the frame rail **A**.
2. **Tow Plug Replacement**
  - A. Remove the original OEM wiring harness from connector **B**. All connector surfaces should be clean and free of dirt.
- New Installation**
  - A. Remove the protective cap from connector. All connector surfaces should be clean and free of dirt.
3. Connect the T-Connector end to the vehicle's mating connector. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.
4. **Nissan Xterra without Tow Package**
  - A. Taillight function on the tow plug will not work unless an OEM relay harness (not included) is purchased. See Nissan Dealer for more information.

### **⚠ WARNING**

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.



### **⚠ WARNING**

Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light: 1 per side (7.5 amps)
- Max. tail lights: (7.5 amps)

Read vehicle's owners manual & instruction sheet for additional information.