


Installation Instructions

T-Connector



1. Locate the vehicle's tail light wiring harness underneath the truck bed near the driver's side frame rail **A**. This harness will have a connection point with connectors matching the ends of the T-connector harness.

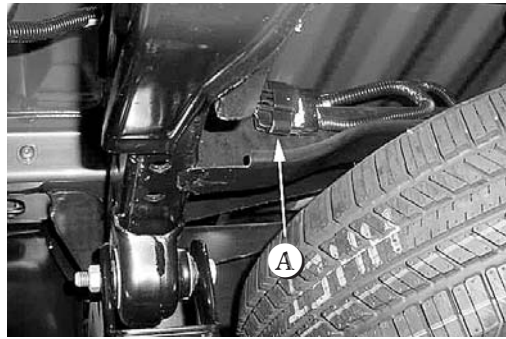

2. Separate the vehicle's connectors **B**, being careful not to break the locking tabs. Check to see that the mating surfaces of the connectors are free of dirt and clean. If necessary.
3. Insert the T-connector harness between the vehicle's connectors.
4. Locate a suitable grounding point near the connectors such as the vehicle's frame or crossmember (Do not drill into vehicle floor or bed). Clean dirt and rustproofing from area. Drill a 3/32" hole and secure white wire with eyelet using screw provided.

⚠ CAUTION

Verify what is behind any surface prior to drilling to avoid damage to the vehicle and/or personal injury. Do not drill into any exposed surfaces.

5. Route the T-connector harness to the center of the vehicle and secure wire to vehicle crossmember or other mountings point using electrical tape or tie straps (not provided).

⚠ WARNING

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.



⚠ WARNING

Overloading circuit can cause fires.

DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light: 1 per side (2.1 amps)
- Max. tail lights: (5 amps)

Read vehicle's owners manual and instruction sheet for additional information.

