




Installation instructions

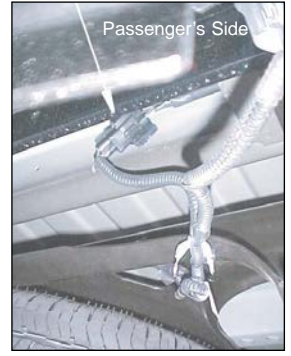

1. Locate the vehicle's taillight wiring harness near the rear of the frame. This harness will have connection points on both sides of the frame with connectors matching the ends of the T-connector adapter.
2. Separate the harness connectors on the left (drivers) side, being careful not to break the locking tabs. Check to see that the mating surfaces of the connectors are free of dirt and clean if necessary.
3. Insert the T-connector adapter with Yellow wire between the harness connectors and lock into place. Be sure that connectors are fully inserted with locking tabs in place. Repeat steps 2 & 3 for right side using the connector with Green wire.
4. Route the T-connector harness to the center of the vehicle and secure wire to vehicle crossmember using tie straps provided.
5. Test the installation with a test light or trailer

This unit is rated for 7.5 amps per circuit.

 DRAW-TITE®