


Installation instructions

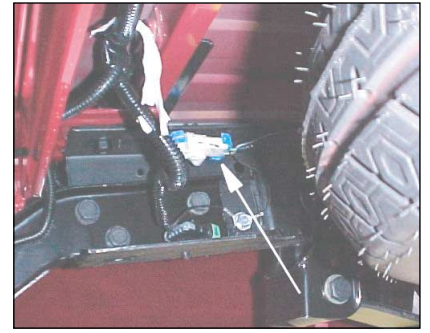

1. Locate the vehicle's taillight wiring harness along the inside of the left rear frame rail. This harness will have a connection point with connectors matching the ends of the T-connector adapter.
2. Separate the vehicle's connectors, being careful not to break the locking tabs. Check to see that the mating surfaces of the connectors are free of dirt and clean if necessary.
3. Insert the T-connector harness between the vehicles connectors.
4. Locate a suitable grounding point near the connectors such as the vehicle's frame or crossmember (Do not drill into vehicle floor or bed). Clean dirt and rust-proofing from area. Drill a 3/32" hole and secure white wire with eyelet using screw provided.
5. Route the T-connector harness to the center of the vehicle and secure wire to vehicle crossmember or other mounting point using electrical tape or tie straps (not provided).
6. Test the installation with a test light or trailer.

This unit is rated for **7.5** amps per circuit.

