
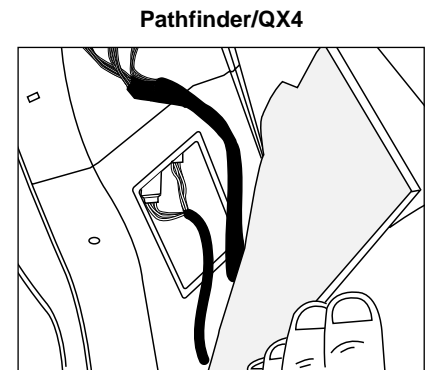


Installation instructions

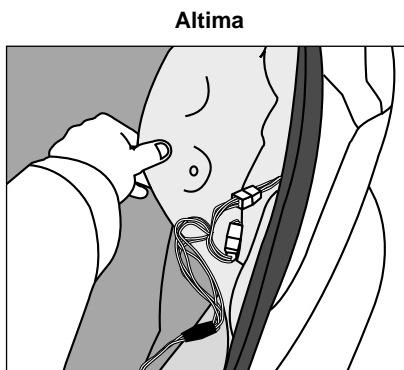

1A. For Nissan Altima open trunk, remove plastic threshold plate and pull back the trunk lining behind the tail lamps on both sides to expose the vehicle's wiring. Locate the vehicle's wiring connectors. The vehicle's connectors will match the ends of the T-connector harness.

1B. For Nissan Pathfinder & Infiniti QX4 open rear door, remove plastic threshold plate and partially remove rear interior trim panel on both sides of the vehicle behind the tail lamps. Look for a square access hole behind the tail lamps and locate vehicle wiring connectors inside. Vehicle's connectors will match the ends of the T-connector harness.

2. Separate the driver's side connectors located in step 1 and insert the T-connector with yellow wire in-between.

3. Route the wire across to the passenger's side and repeat step 2, using the T-connector with the green wire.

4. Locate a suitable grounding point on the driver's side near the connectors (do not drill into the vehicle floor or bed). Drill a 3/32" hole and secure white wire with eyelet using screw provided.

5. Test the installation with a test light or trailer.

6. Secure black box to vehicle with cable tie or screw provided.

7. Reattach all interior trim panels, threshold plate and trunk lining.

This unit is rated for **4** amps per circuit

