




Installation instructions

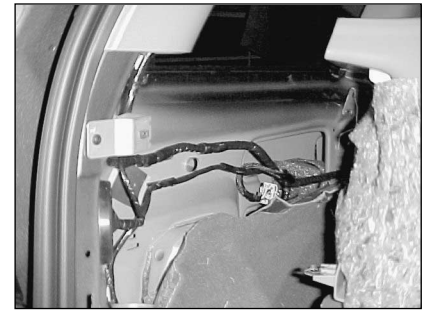

1. Open the rear door of the vehicle and temporarily remove the rear threshold, cargo net and cargo cover to allow removal of the rear interior trim panel on the driver's side.

2. Locate the vehicle's green trailer tow plug, located behind the trim panel removed in step 1.

3. Plug the T-connector harness into the vehicle's connector and lock into place, using the red locking tab.

4. Test the installation with a test light or trailer.

5. Reinstall the threshold, trim panel, cargo net and cover.

This unit is rated for **4** amps per circuit.

