


Installation instructions

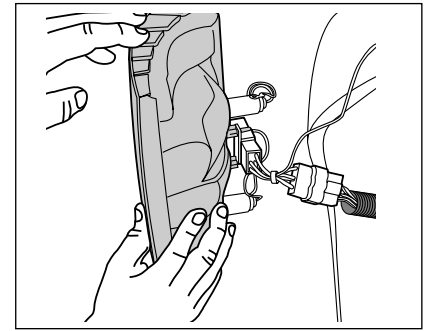

1. Remove both tail light assemblies and access the tail light connectors. The lens cover, seal and housing will separate when screws are removed.

2. Beginning on the left (driver's) side, route the T-connector's harness containing the 3 bonded wires out from under the vehicle through the tail light opening.

3. Disconnect the vehicle's wiring harness connector from the tail light assembly and plug the T-connector between these separated halves, ensuring the connectors are fully inserted together.

4. Route the connector with the green wire across the vehicle along the vehicle frame and out from under the vehicle through the right (passenger) side tail light opening. Repeat step 3 using the connector containing the green wire.

5. Locate a suitable grounding point near the connector. Drill a 3/32" hole and secure the White wire using the eyelet and screw provided. Do not drill into the vehicle floor or other exposed surfaces.

6. Test the installation with a test light or trailer. Reinstall the tail light assemblies removed in step 1, ensuring the seals are securely in place. Secure the black box and wires to the vehicle frame with screw or cable ties provided.

This unit is rated for 4 amps per circuit.

The logo for DRAW-TITE, featuring a stylized lightbulb icon to the left of the brand name in a bold, blue, sans-serif font.