


Installation Instructions

T-Connector

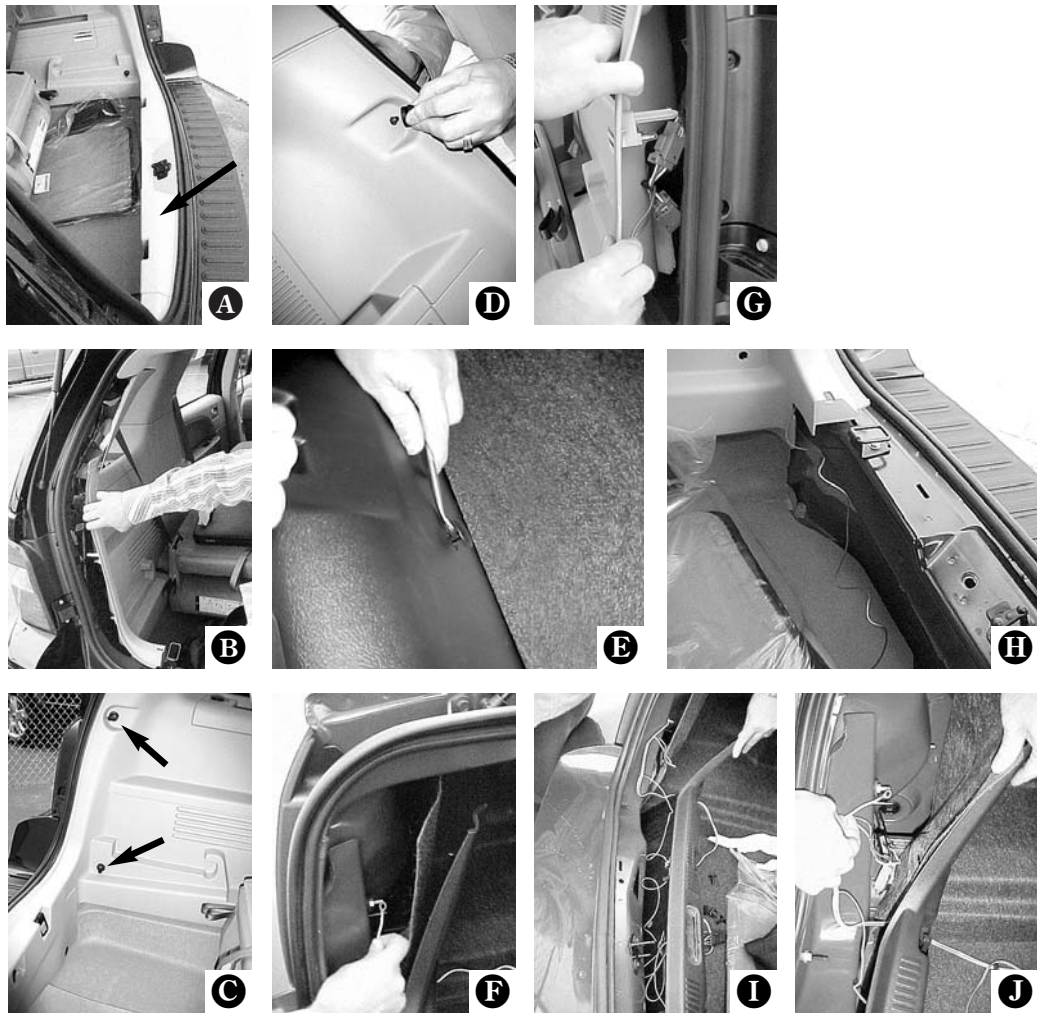

TOOLS REQUIRED:

Trim Panel Puller

1. Ford Freestyle

- A. Open rear hatch. Temporarily remove the rear threshold plate. **(A)**
- B. Partially remove the rear interior trim panels on both the driver and passenger side of the vehicle. **(B)** Several trim panel fasteners will need to be removed to remove the panels. **(C, D)** Set aside all items removed being careful not to damage parts.

Ford Five Hundred

- A. Open trunk. Temporarily remove the rear threshold plate. **(E)**
- B. Partially remove the felt trunk liner behind the taillights. **(F)**

2. On the driver and passenger sides of the vehicle, locate the vehicle's taillight wiring harness. **(G)** The taillight wiring harness will have a connection point, on both sides, matching the ends of the T-Connector. Separate this connector, being careful not to break the locking tabs. All connector surfaces should be clean and free of dirt.
3. On the driver side, insert the T-Connector end with the **yellow** wire between the vehicle wiring connectors and lock into place. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.

4. Route the T-Connector end with the **green** wire to the passenger's side behind the panels and along the threshold. **(I, J)** Repeat Step 4 using T-Connector containing the **green** wire.
5. Locate a suitable grounding point near the connector.

Ford Freestyle

- A. Drill a 3/32" hole and secure the **white** wire using the eyelet and screw provided.

⚠ CAUTION

Verify what is behind any surface prior to drilling to avoid damage to the vehicle and/or personal injury. Do not drill into any exposed surfaces.

Ford Five Hundred

- A. On driver side, locate existing ground stud. Loosen bolt, place screw eyelet on stud and re-tighten bolt. **(I)**

⚠ WARNING

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.

NOTE:

Ford Freestyle

Route the 4-flat from below the driver's side trim panel into rear storage compartment. Store there when not in use.

Ford Five Hundred

Route the 4-flat from below the threshold plate into trunk. Store there when not in use.

6. Ford Freestyle

- A. Reinstall the plastic trim panels, threshold, storage covers, floor covering and other items removed during installation, being careful not to pinch or cut the wires.

Ford Five Hundred

- A. Reinstall felt trunk liner, threshold, and other items removed during installation, Being careful not to pinch or cut the wires.

⚠ WARNING

Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light: (7.5 amps)
- Max. tail lights: (7.5 amps)

Read vehicle's owners manual and instruction sheet for additional information.