


Installation Instructions

T-Connector

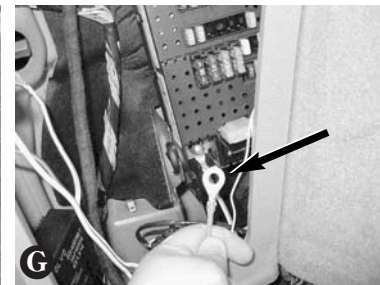

TOOLS REQUIRED:

10mm Socket & Ratchet or 10mm Wrench,
Trim Panel Remover, Drill (3/32" Drill Bit),
Philips Head Screwdriver

1. Open the tailgate and remove the cargo door on the floor **A**. Carefully remove the floor trim panels and access panels on each side of the vehicle **B** - **C**. Set aside all items removed being careful not to damage parts.
2. On the driver and passenger sides of the vehicle, locate the vehicle's taillight wiring harness **D**. The harness is located inside the access panel area. The taillight wiring harness will have a connection point, on both sides, matching the ends of the T-Connector. Separate this connector, being careful not to break the locking tabs. All connector surfaces should be clean and free of dirt.
3. On the driver's side, insert the T-Connector end, with the **yellow** wire, between the vehicle wiring connectors and lock into place. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.
4. On the Driver's side route the T-Connector end with the **green** wire through the trim panel access hole, across the threshold, & through the passenger trim panel access hole **E**. Repeat step 3 for the passenger's side using the T-Connector harness end with the **green** wire **F**.

5. Locate a suitable grounding point near the connector such as the vehicle's frame or cross member. (Do not drill into vehicle floor or bed.) Clean dirt and rustproofing from area. Drill a 3/32" hole and secure **white** wire using eyelet and screw provided.

⚠ CAUTION

Verify what is behind any surface prior to drilling to avoid damage to the vehicle and/or personal injury. Do not drill into any exposed surfaces.

6. On the driver's side locate the power cable stud **G**. Using a wrench or socket, remove the nut and place the ring terminal with **yellow** wire on stud. Replace the nut and tighten. Install the 10-amp fuse into the fuse holder.

⚠ WARNING

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.

7. In the driver's side storage area, clean a flat area using a mixture of rubbing alcohol and water. Mount the T-Connector black box using double-sided tape provided.
8. Secure the remainder of the T-Connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would pinch, cut or melt the wire.

9. Replace both access panels, floor trim panels and cargo door removed during installation.

NOTE

Store 4-Flat connector in rear cargo area when not in use.



⚠ WARNING

Overloading circuit can cause fires.

DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light: 1 per side (2.1 amps)
- Max. tail lights: (5.6 amps)

Read vehicle's owners manual & instruction sheet for additional information.