


Installation Instructions

T-Connector



Pontiac Vibe

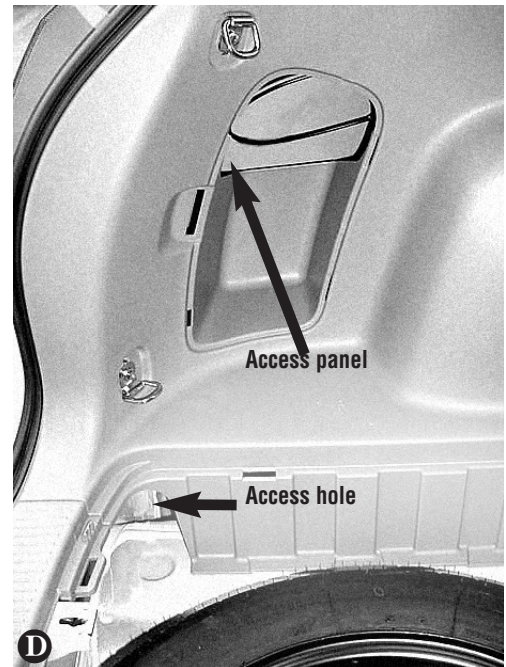

TOOLS REQUIRED:

Drill (3/32" Drill Bit), Philips Head Screwdriver

1. Open the vehicle's rear tailgate, remove cargo nets and cargo floor hatch to access the spare tire area. Unscrew nut holding spare tire cover in place and remove cover. Set aside all items removed being careful not to damage parts. Remove the access panel doors on both sides to access vehicle's wiring connectors **A B C**.
2. On the driver and passenger sides of the vehicle, locate the vehicle's taillight wiring harness. The taillight wiring harness will have a connection point, on both sides, matching the ends of the T-Connector. Separate this connector, being careful not to break the locking tabs. All connector surfaces should be clean and free of dirt.
3. Locate the access hole on the driver's side between the spare tire and the rear threshold. Route T-Connector end with **yellow** wire and the end with **brown** and **red** wires up through the hole to the access panel **D**.
4. On the driver's side, attach both ends of the T-Connector containing the **yellow, brown** and **red** wires. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.

5. Route the T-Connector end with **green** wire to the passenger's side. Repeat steps 3&4 on passenger's side with T-Connector end containing the **green** wire.
6. Locate a suitable grounding point. (Do not drill into vehicle floor or bed. Do not drill into any exposed surfaces.) Clean dirt and rustproofing from area. Drill a 3/32" hole and secure **white** wire using eyelet and screw provided.

⚠ CAUTION

Verify what is behind any surface prior to drilling to avoid damage to the vehicle and/or personal injury. Do not drill into any exposed surfaces.

⚠ WARNING

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.

7. Mount the T-Connector black box using the double-sided tape provided. Secure the remainder of the T-Connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would pinch, cut or melt the wire **E**.

8. Replace both access panels, spare tire cover, cargo floor hatch & cargo nets removed during installation.

NOTE

Store 4-Flat in trunk or rear cargo area when not in use.



⚠ WARNING

Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light: 1 per side (2.1 amps)
- Max. tail lights: (5 amps)

Read vehicle's owners manual & instruction sheet for additional information.