

Installation Instructions

T-Connector




Forester



Outback



Tribeca

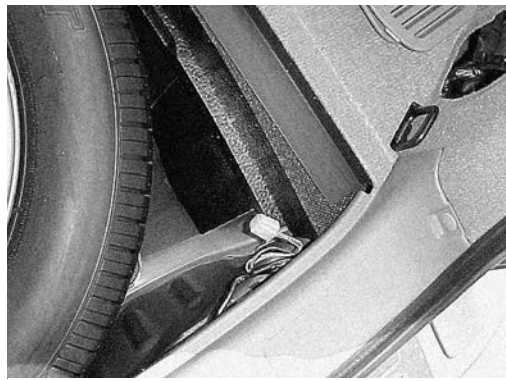


Forester



Outback



Forester

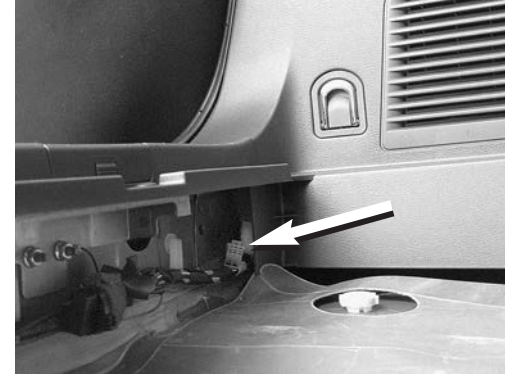

Tribeca

TOOLS NEEDED:

Trim Panel Remover, Test-probe

1. Open trunk/hatch on vehicle. Locate vehicle's trailer plug harness. On some vehicles the vehicle plug is located on the driver's side behind the interior access panel for the taillamp assembly. On other vehicles (such as the Forester) the vehicle plug is located in the spare tire area on the passenger's side either under the threshold or under the carpet panel near the passenger side interior trim panel.

2. Remove the tape on the vehicle's plug and insert the T-connector into the vehicle's trailer plug harness.

⚠ CAUTION All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.

⚠ WARNING Secure the remainder of the T-Connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would pinch, cut or melt the wire.

3. On some models the T-connector may be routed and stored in either the spare tire well or in the storage compartment next to the vehicle's access panel.

⚠ WARNING Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light: 1 per side (2.1 amps)
- Max. tail lights: (4.2 amps)

Read vehicle's owners manual & instruction sheet for additional information.

