


Installation Instructions

T-Connector



Range Rover Evoque

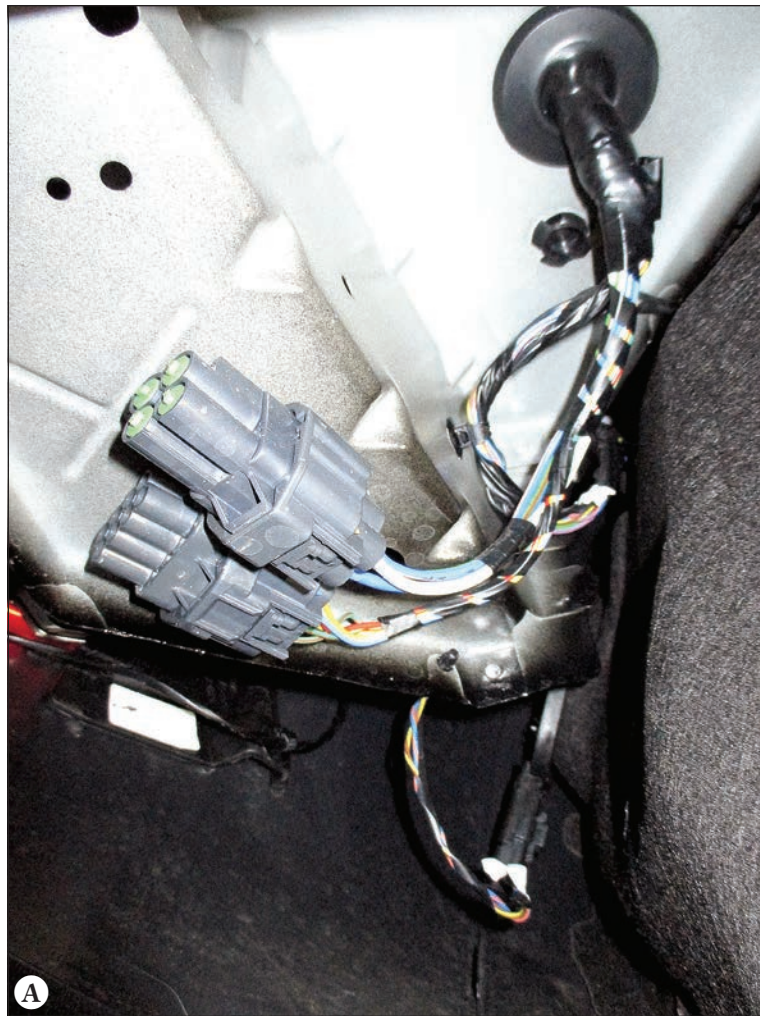

TOOLS REQUIRED:

Trim Panel Remover, Drill (3/32" Drill Bit), Philips Head Screwdriver, Test-probe

1. Locate the vehicle's towplug located under the vehicle on the passenger side. Locate the opening to the right of the vehicle muffler. Reach up into opening to locate the vehicle's grey towplug **A**. Disconnect the mating protective cover and discard. Connect the towplug harness into mating harness. Check to see that the mating surfaces of the wiring connectors match. All connector surfaces should be clean and free of dirt.

⚠ WARNING

All connector surfaces should be clean and free of dirt. Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.

2. Locate a suitable grounding point. Drill a 3/32" hole and secure the **white** wire using the eyelet and screw provided. Do not drill into any exposed surfaces.

⚠ CAUTION

Verify what is behind any surface prior to drilling to avoid damage to the vehicle and/or personal injury. Do not drill into any exposed surfaces.

3. Mount the 4-Flat end in an accessible location with a bracket or electrical box (not included).

⚠ WARNING

Overloading circuit can cause fires. DO NOT exceed lower of vehicle manufacturer rating or:

- Max. stop/turn light: (7.5 amps)
- Max. tail lights: (7.5 amps)

Read vehicle's owners manual & instruction sheet for additional information.