

## Installation Instructions



### T-Connector



Chevy



## Wiring Adapter Housing (Containing Female Terminals - Wire Side)

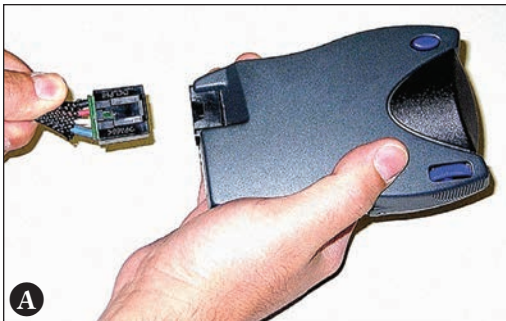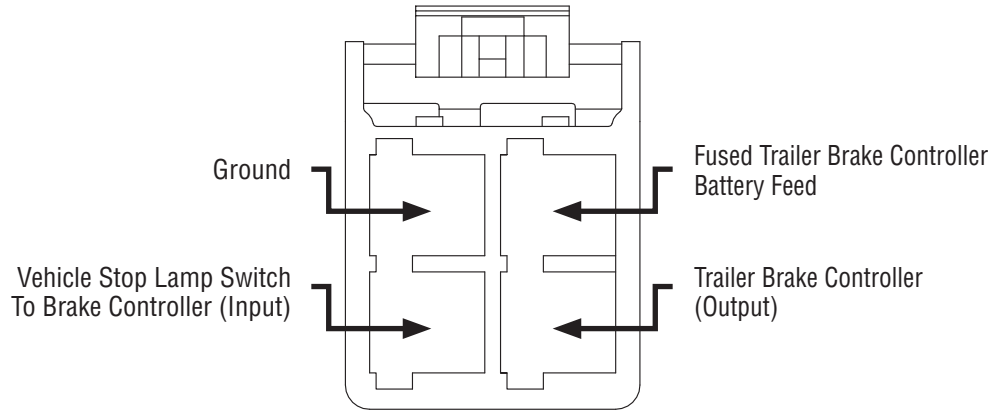

A



B



C

### TOOLS REQUIRED:

Trim Panel Remover, Wire Crimpers

#### ⚠ CAUTION

##### 1 Plug Option

Using the butt connectors provided, attach the wires from the adapter to the corresponding wires on the electric brake control, following the brake control installation instructions, before attaching to the vehicle junction box **A**.

##### 2 Plug Option

Plug brake control adapter into mating receptacle on backside of brake control before attaching to the vehicle junction box.

1. Locate the vehicle's black Electric Junction Box in the interior of the pickup, underneath the dashboard, left of the steering column, just above the carpet. Remove the cover and locate the mating connection point in the Electric Junction Box for electric trailer brakes **B** **C**.
2. Plug the Brake Control Adapter into the mating connection in the Electric Junction Box. Follow all brake control manufacturer's installation instructions.

#### ⚠ WARNING

Complete the installation per the electric brake control manufacturer's instructions and mount the unit as directed. Perform test procedures as instructed.

#### ⚠ WARNING

Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max.4 axles: 8 brakes (24 amps)

Read vehicle's owners manual and instructionsheet for additional information.

Learn more about trailer hitches and towing we have.