

Installation Instructions

Electronic Trailer Brake Control Wiring Adapter




KIA Borrego



Wiring Adapter Housing
(containing Male Terminals) -
Wire Side

BLACK: FUSED TRAILER BRAKE
CONTROLLER BATTERY FEED

BLUE: TRAILER BRAKE CONTROLLER
(OUTPUT)

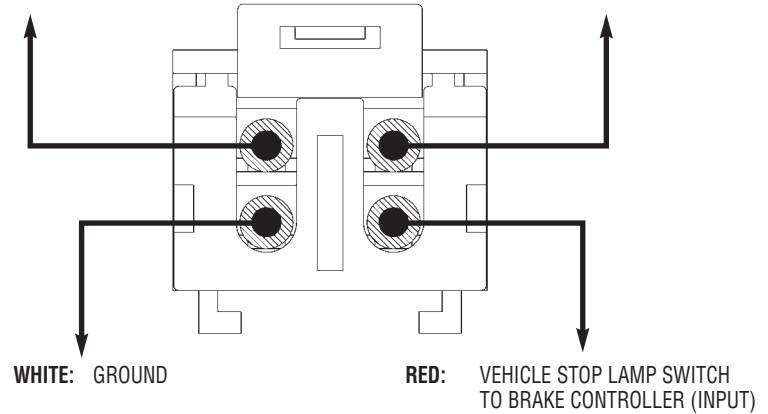

CAUTION

Plug brake control adapter into mating receptacle on backside of brake control before attaching to the vehicle connector **A**.

1. Locate the vehicle's electric brake control harness. The harness will be located underneath the dash and left of the steering column, taped to another harness near the emergency brake pedal **B**. There will be a 4-pin connector that mates with the one on the adapter **C**.
2. Plug the brake control adapter into the vehicle's electric brake control harness connector. Follow all brake control manufacturer's installation instructions.

NOTE:

Vehicles not equipped with OEM trailer tow package, may require fuses and relays to complete output and battery feed circuits (sold separately). Consult owners manual for locations.

⚠ WARNING

Complete the installation per the electric brake control manufacturer's instructions and mount the unit as directed. Perform test procedures as instructed.



⚠ WARNING

Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max. 3 AXLES:
6 BRAKES 18 amps)

Read vehicle's owners manual & instruction sheet for additional information.

