



Built for *Extremes*. Designed for Everyday Life


Product Name:

Mounting Hardware Kit

Product Code:

59506

Please read all instructions carefully before assembly, installation and/or use of this product.

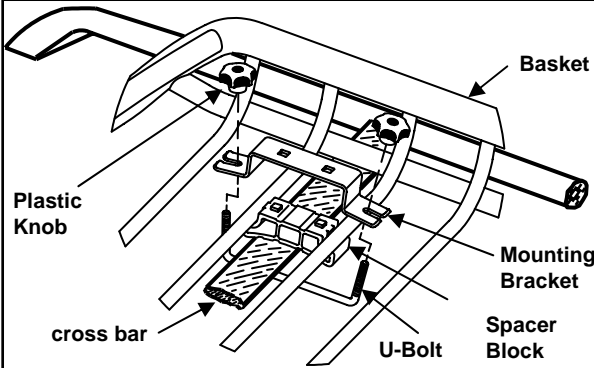


ATTACH MOUNTING CLAMPS


- Place mounting bracket on top of spacer block. The square holes in bracket must engage the squares on spacer block.
- Install u-bolt around cross bar and into slots in mounting bracket.
- Install plastic knobs onto u-bolts.
- Tighten all plastic knobs firmly and evenly.
- Make sure installation is secure by pulling side-to-side and fore and aft on basket.

NOTE: The cargo carrier should not move on cross bars when plastic knobs are tightened properly.

WARNING: There must be a minimum of 1/2" of threads engaged on u-bolt on all plastic knobs.

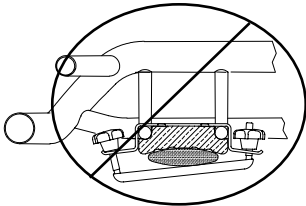

INCORRECT
INCORRECTO

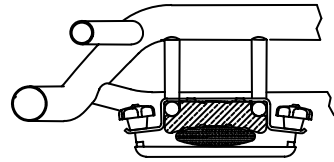

CORRECT / CORRECTO