



Also available from **CFR Performance**

**HZ-6405**  
**Small Block Chevy**  
**Alternator Bracket Set**



**HZ-6407**  
**Small Block Chevy Type II**  
**Power Steering Pump Bracket**  
**Set**

Installation



## Chevy Small Block Type II Power Steering Pump Bracket Set **HZ-6407**



- 1 x Main Bracket (5 Holes)
- 2 x 3/4" A Bolt(s) - 5/16"
- 2 x 3/4" B Bolt(s) - 7/32"
- 1 x 5/8" Diameter Washer



## Installation Instructions

### ***step 1***

Attach Bracket to Type II  
Power Steering Pump using B Bolts. Use  
washer with lower bolt location for adjusting.

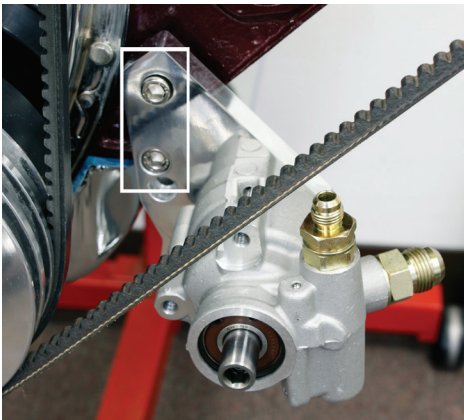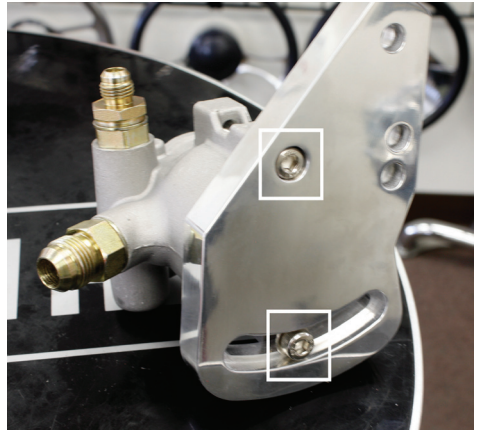

### ***step 2***

Use A Bolts to attach bracket and pump  
configuration to the engine block.