



Also available from **CFR Performance**  
**HZ-4302**  
**Small Block Chevy**  
**Power Steering Pump Bracket Set**

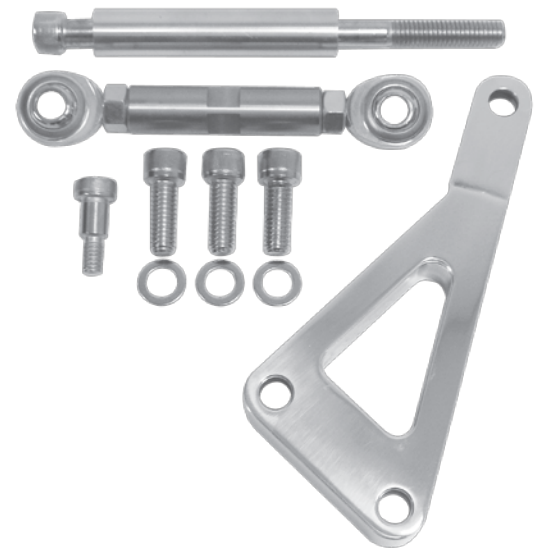


**HZ-4304**  
**Small Block Chevy**  
**Alternator Bracket Set (LWP)**  
Installation Guide

**HZ-4304  
Alternator Bracket Set (LWP)**

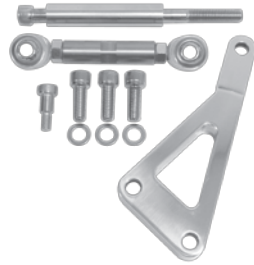


**Installation Instructions**

1. Remove water pump pulley (if needed, pull off fan).
2. Mount adjustment bracket to the lower left side of the water pump using 5/16"-18 x 4" SHCS and 1.250" spacer between the bracket and the water pump on the upper and lower part of the adjustment bracket.

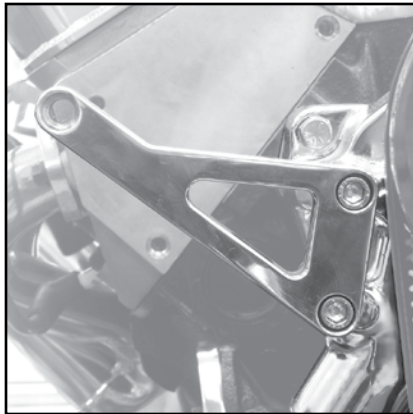

3. Using one 3/8"-16 x 6" SHCS bolt, insert into the alternator with a 2 3/4" diameter mounting using 3.250" spacer between the alternator and the hole on the upper left passenger side head. **KEEP THE BOLT LOOSE FOR ADJUSTMENT FROM THE ROD.**

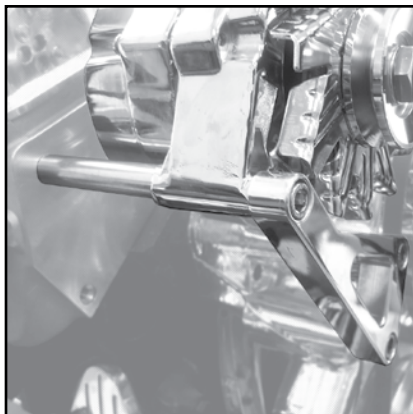

4. Mount the 1 5/8" adjustment rod to the front top left side of the water pump using one 3/8" x 1" SHCS bolt. On the other end of the 1 5/8" rod mount it on the backside of the alternator with a 3/8" mounting. For the best results, when finished adjust the rod and make sure all bolts are securely tightened.

