




Also available from **CFR Performance**
HZ-6406
Small Block Chevy
Air Conditioning Bracket Set

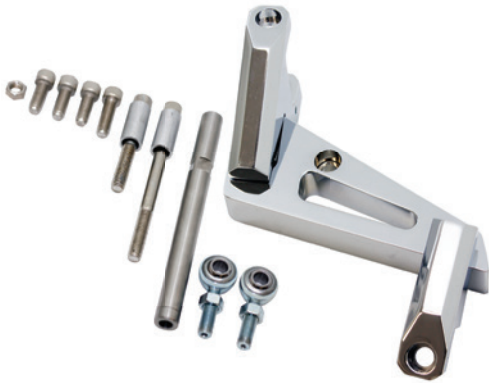

HZ-6405
Small Block Chevy
Alternator Bracket Set
Installation Guide

Chevy Small Block Alternator Bracket Set HZ-6405


1 x Bracket - A	1 x 2-3/4" Bolt
1 x Bracket - B	2 x 1-1/4" Bolt(s)
1 x Bracket - C	1 x 2-1/4" Bolt
1 x 7" Adjustable Tensioning Rod + 2 x Ends	4 x 1" Bolt(s)
	1 x 7/8" Bolt
	1 x Washer



Installation Instructions

step 1

Use (2) 1" Bolts to assemble Bracket A to Bracket B together.

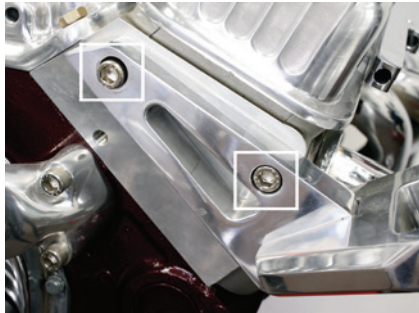


step 2

Attach bracket assembly to the front of the driver's side cylinder head using (2) 1-1/4" Bolts.

Note Upper bolt acts as placeholder for now.

step 3

Insert Alternator into Bracket B and attach with (1) 2-3/4" Bolt.

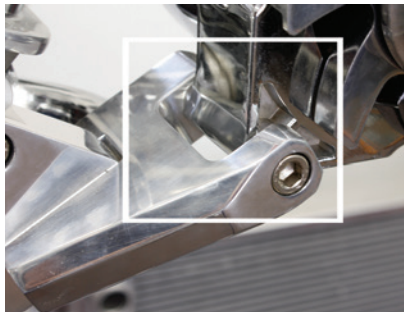


step 4

Attach Bracket C to top of Alternator with (1) 7/8" Bolt.




steps 5 & 6

Assemble heim joints on tension rod; remembering left hand threads on end. Attach tension rod to Bracket C with (1) 1" Bolt.

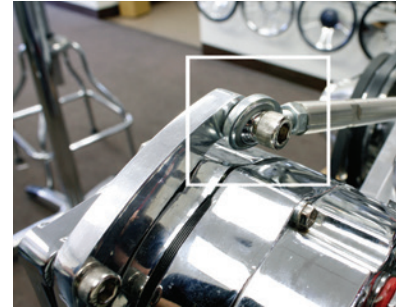

step 7

Secure other end of tension rod to Bracket A and swap out the upper placeholder bolt with (1) 2-1/4" Bolt, using shim washer between heim joint and bracket.

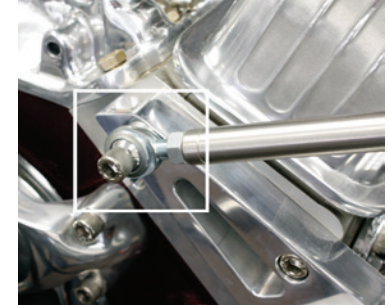

Final



Discover other performance starting & charging on our website.