


Final



Also available from **CFR Performance**

**HZ-6405
Small Block Chevy
Alternator Bracket Set**

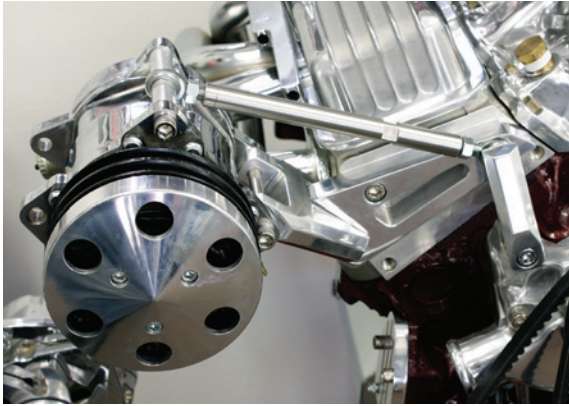

CFR
PERFORMANCE




**HZ-6406
Small Block Chevy
Air Conditioning Bracket Set**
Installation Guide



**Chevy Small Block
Air Conditioning Bracket Set
HZ-6406**



- | | |
|---|----------------------|
| 1 x Bracket - A (2 Holes) | 2 x 1-3/8" Spacer(s) |
| 1 x Bracket - B (2 Holes) | 1 x 2-3/4" Bolt |
| 1 x Bracket - C (1 Hole) | 3 x 1" Bolt(s) |
| 1 x 7" Adjustable Tensioning Rod + 2 x Ends | 1 x 1-1/4" Bolt |
| 2 x 5" Bolt | 2 x 1-5/8" Nut |
| | 5 x Washer(s) |
| | 1 x Mini-washer |

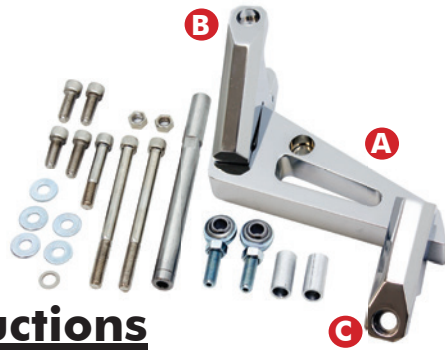

Installation Instructions

step 1

Assemble Bracket A and B with (2) 1" Bolts.

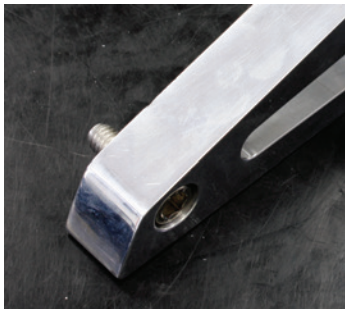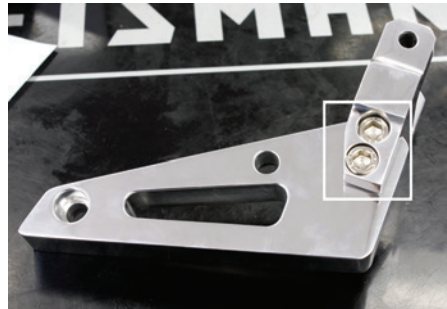

steps 2

Place 1-1/4" Bolt facing outward in opposite end of Bracket A.



step 3 & 4

Assemble heim joints to tension rod and slide one end over outward exposed bolt. Attach Bracket C to remaining portion of exposed bolt.



step 5

Attach bracket assembly to engine block with (1) 1" Bolt.

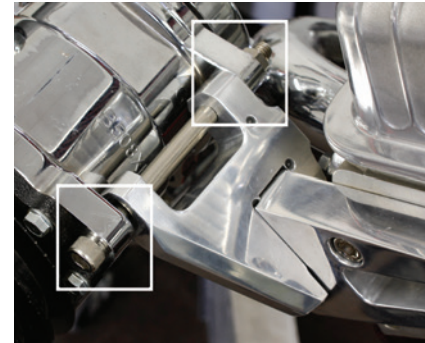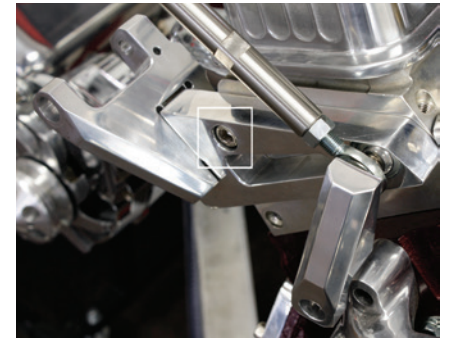


step 6

Use (1) 5" Bolt to attach Air Compressor to bracket B; tighten with nut. Use (1) washer and (1) mini-washer to adjust line up as needed.

step 7

Use (1) 5" Bolt and (2) Washers to attach other end of tension rod to top of air compressor; tighten with nut.

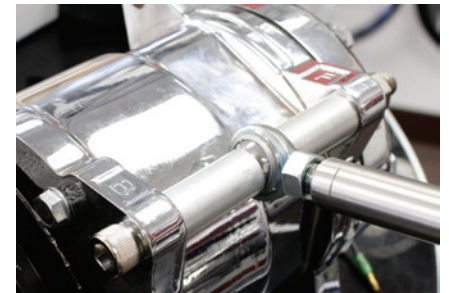

step 8

Slide (1) 2-3/4" Bolt through Bracket C into water pump bolt hole. Use remaining shim washers as needed to ensure water pump is tight.

