



# **CGS** Installation Instructions


Thank you for choosing a CGS Catback Exhaust System™ to power your vehicle. These instructions will take you through the installation of your new catback exhaust system.

# Kit includes:

Qty.DescriptionPart#1Headpipe300-10411CGS Muffler83001


3 3" Clamps1 2 1/2" Clamp

1 over the axel pipe 300-1042 1 exit pipe 300-1043 1 3 1/2"Stainless Steel Tip93530

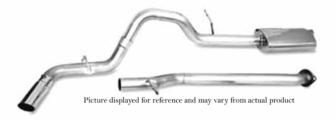





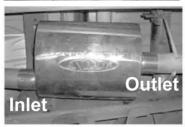





### 1) Remove stock exhaust system

First start by removing the stock pipe by unbolting the clamp at the headpipe.

Then slide the complete system carefully towards the rear off of the rubber hangers.

Remove the system from under the truck. Cutting may be required for removal for certain models.

### 2) Installing your catback exhaust system

Make sure that all exsting rubber Hangers are still in place. Slide the smaller end of your new headpipe onto the stock pipe while the two brackets slide into the rubber hangers. Proceed to install muffler onto headpipe with the offset in the inlet and closest to the trucks frame the center in the outlet. Next install the overaxle pipe onto the muffler and insert the brackets into the rubber hangers. Now the exit pipe will install and insert the bracket into the rubber hanger. Once the exhaust system is positioned and lined up correctly, install clamps at all connections. Install the stainless steel tip and tighten bolts.

#### 3) Final checklist

Once completed, check to make sure all the clamps and bolts have been securely fastened. That's it, a simple install with a lot of results. **Congratulations!** You just installed more horsepower to your truck by allowing it to breathe easier with a CGS Catback Exhaust System<sup>TM</sup>.

Ask your CGS dealer about our Air Intake System for your Truck

Thank you again and enjoy your new CGS Catback Exhaust System™.



CGS PERFORMANCE EXHAUST EXHAUST SYSTEMS