




# FENDER TRIM INSTALLATION INSTRUCTIONS

Instructions explaining how to use the locking tabs to secure the wheel well trim to the car.

## LOCKING TAB INSTALLATION INSTRUCTIONS

(screw also available)

- 1) Get Locking Tab hooks that come with kit.
- 2) Test fit fender trim to check positioning & fit.
- 3) When ready to install, place the hooks with the curved side locked into position on the inside edge of the car fender. Then let the straight part of the hook pass through the slot in the fender trim into position. Use a set of pliers to fit the trim tightly to the fender.
- 4) Repeat installation procedure for all for hooks.

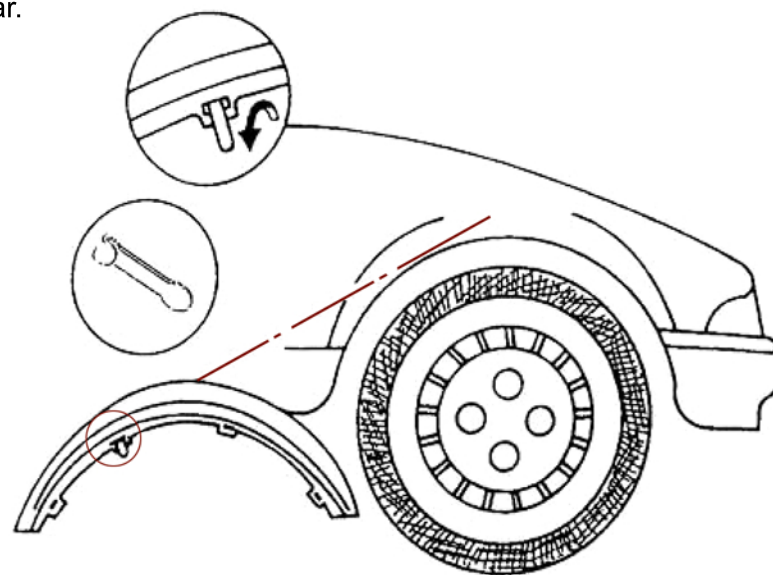

FENDER TRIM

FENDER



HOOK



PLIERS

