



INSTALLATION INSTRUCTIONS For Part #s:


11300

NOTE:

BEFORE ATTACHING **MIRROR**, WE RECOMMEND THAT YOU CLEAN VEHICLE MIRROR. YOU MAY ALSO WISH TO APPLY A THIN COAT OF WAX.


PRODUCT MAY MAR FINISH. WEDGE TO BE INSERTED THIN EDGE FIRST.

1

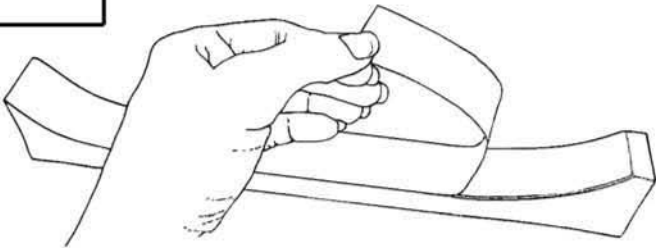


AFFIX FELT STRIP TO WEDGE AS SHOWN. MAKE SURE WEDGE IS CLEAN. CLEAN WITH ISOPROPYL ALCOHOL AND A CLEAN RAG, IF NECESSARY.

2

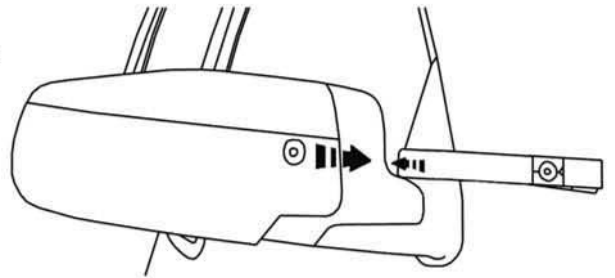

SLIDE THE TOWING MIRROR OVER THE MIRROR HEAD AND THEN INSERT WEDGE BETWEEN THE TOWING MIRROR AND MIRROR HEAD.

3

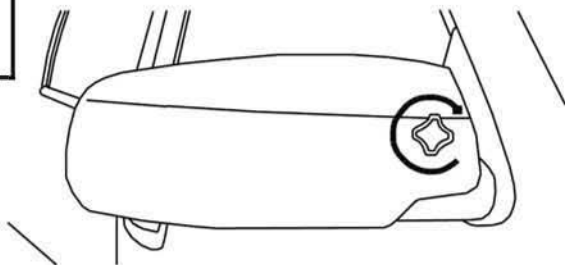

ALIGN THE THREADED HOLE WITH THE MOLDED CUP ON THE BACK OF THE WEDGE. SCREW KNOB THROUGH RAISED HOLE ON BACK OF TOWING MIRROR. TIGHTEN SECURELY.

● Please remove Custom Towing Mirrors before entering automatic car washes. Use extra precaution when approaching tight spaces, such as ATM terminals and other drive-through services.