




Day Night Mirror

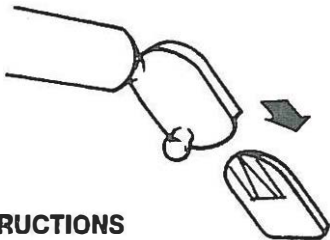

INSTRUCTIONS

**TO MOUNT NEW MIRROR
ON GM OR FORD WITH ORIGINAL BRACKET
ON WINDSHIELD**

1. Loosen screw to slide mirror over windshield bracket and tighten screw to secure.

**IF WINDSHIELD HAS NO BRACKET OR CIPA
MIRROR DOES NOT FIT THEN USE MIRROR
MOUNTING BRACKET PROVIDED.**

1. Cement bracket to windshield placing smaller surface of bracket to the glass using a professional quality Rearview Mirror Adhesive.
2. Follow instructions on adhesive package very carefully.
3. After cementing bracket to windshield, loosen screw to slide mirror over windshield bracket and tighten to secure.