

INSTALLATION INSTRUCTIONS For Part #:

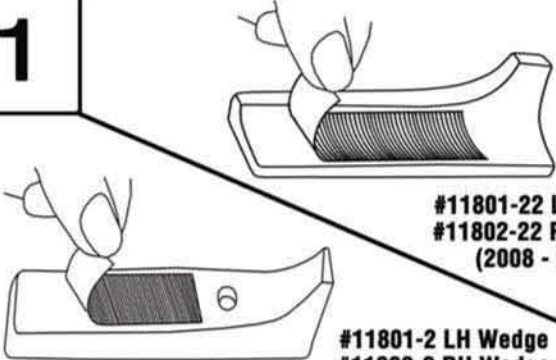
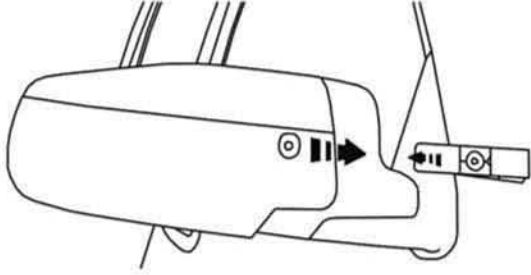
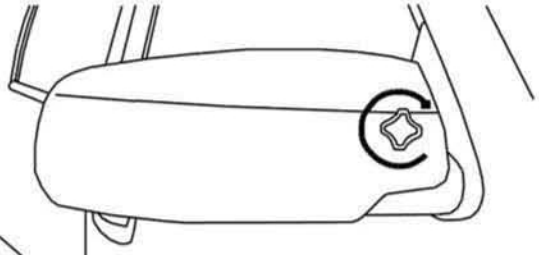
11800

2004 - 2012 Ford F-150,
F-250 Light Duty, F-250 XLT

NOTE:

BEFORE ATTACHING MIRROR, WE RECOMMEND THAT YOU CLEAN VEHICLE MIRROR. YOU MAY ALSO WISH TO APPLY A THIN COAT OF WAX.

PRODUCT MAY MAR FINISH. WEDGE TO BE INSERTED THIN EDGE FIRST.

1	 <p>#11801-22 LH Wedge #11802-22 RH Wedge (2008 - 2012)</p> <p>#11801-2 LH Wedge #11802-2 RH Wedge (2004 - 2007)</p> <p>AFFIX NEOPRENE STRIP TO WEDGE AS SHOWN. MAKE SURE WEDGE IS CLEAN. CLEAN WITH ISOPROPYL ALCOHOL AND A CLEAN RAG, IF NECESSARY.</p>	2	 <p>SLIDE THE TOWING MIRROR OVER THE MIRROR HEAD AND THEN INSERT WEDGE BETWEEN THE TOWING MIRROR AND MIRROR HEAD.</p>
3	 <p>ALIGN THE THREADED HOLE WITH THE MOLDED CUP ON THE BACK OF THE WEDGE. SCREW KNOB THROUGH RAISED HOLE ON BACK OF TOWING MIRROR. TIGHTEN SECURELY.</p>	<p>● Please remove Custom Towing Mirrors before entering automatic car washes. Use extra precaution when approaching tight spaces, such as ATM terminals and other drive-through services.</p> <p>CIPA-USA</p>	