




INSTALLATION INSTRUCTIONS for 2006 – 2010 GM Trucks

Door Panel Removal

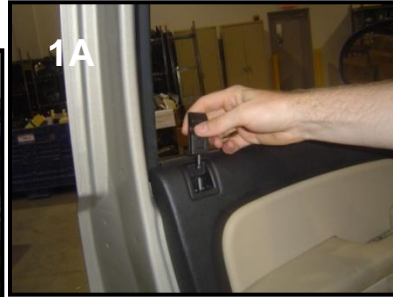

- 1) Start with opening the driver's side door and lowering the window. Remove lock lever (1A).
- 2) Using a plastic pry bar [slotted screw driver], slowly pry plastic cover to reveal screw. **CAUTION: These plastic covers are fragile and break easily. Be very gentle in disengaging them.**
- 3) Remove screw with 10mm socket.
- 4) Slowly pry plastic cover using a plastic pry bar [slotted screw driver].
- 5) Remove the (2) revealed screws with a 10mm socket.
- 6) With the plastic pry bar [slotted screwdriver], pry around and remove the triangular panel as shown.
- 7) Lift up and slowly pull door panel out partially and let rest.

Mirror Removal and Installation

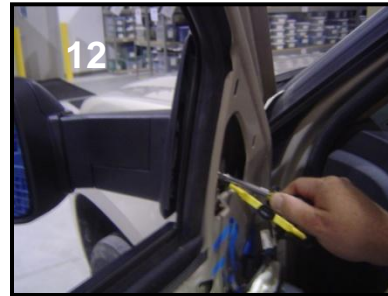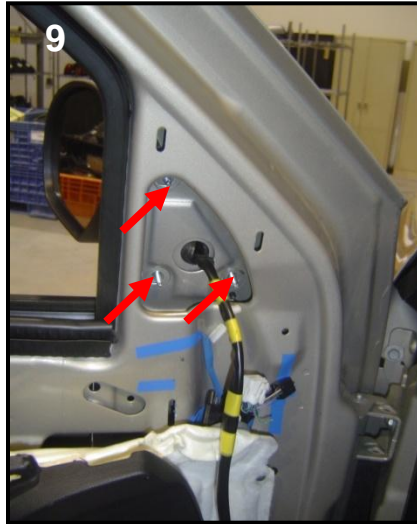

- 8) Disconnect the connectors.
- 9) Secure the mirror housing with one hand, remove the (3) nuts holding the mirror to the door frame using a 10mm socket. **CAUTION: Not securing mirror with one hand before loosening nuts could cause the mirror to fall and become damaged.**
- 10) Carefully remove mirror from door frame and set mirror aside.
- 11) Carefully place new mirror into door frame.
- 12) Secure the mirror housing with one hand, install the (3) nuts holding the mirror to the door frame using a 10mm socket. **CAUTION: Not securing mirror with one hand before tightening nuts could cause the mirror to fall and become damaged.**
- 13) Connect the connectors.
- 14) Reassemble door panel & covers.