



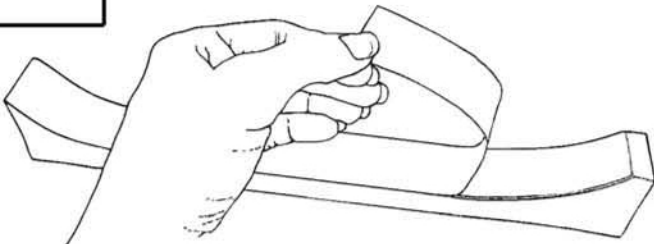
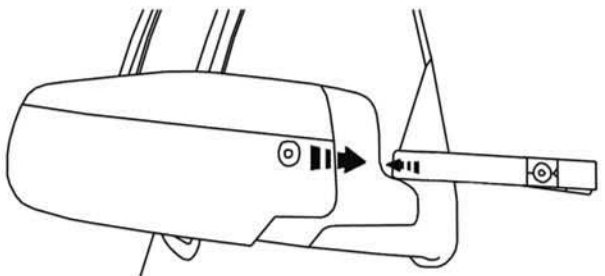
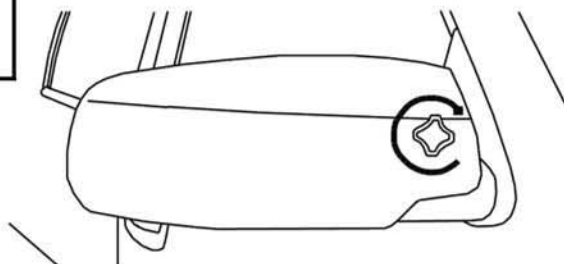
INSTALLATION INSTRUCTIONS For Part #s:

11300

NOTE:

BEFORE ATTACHING MIRROR, WE RECOMMEND THAT YOU CLEAN VEHICLE MIRROR. YOU MAY ALSO WISH TO APPLY A THIN COAT OF WAX.

PRODUCT MAY MAR FINISH. WEDGE TO BE INSERTED THIN EDGE FIRST.

<p>1</p>  <p>AFFIX FELT STRIP TO WEDGE AS SHOWN. MAKE SURE WEDGE IS CLEAN. CLEAN WITH ISOPROPYL ALCOHOL AND A CLEAN RAG, IF NECESSARY.</p>	<p>2</p>  <p>SLIDE THE TOWING MIRROR OVER THE MIRROR HEAD AND THEN INSERT WEDGE BETWEEN THE TOWING MIRROR AND MIRROR HEAD.</p>
<p>3</p>  <p>ALIGN THE THREADED HOLE WITH THE MOLDED CUP ON THE BACK OF THE WEDGE. SCREW KNOB THROUGH RAISED HOLE ON BACK OF TOWING MIRROR. TIGHTEN SECURELY.</p>	<p>● Please remove Custom Towing Mirrors before entering automatic car washes. Use extra precaution when approaching tight spaces, such as ATM terminals and other drive-through services.</p>