




INSTALLATION INSTRUCTIONS For Part #'s:

10400, 10500, 11600, 11700

NOTE:

- US** BEFORE ATTACHING MIRROR, WE RECOMMEND THAT YOU CLEAN VEHICLE MIRROR. YOU MAY ALSO WISH TO APPLY A THIN COAT OF WAX PRODUCT MAY MAR FINISH. WEDGE TO BE INSERTED THIN EDGE FIRST.

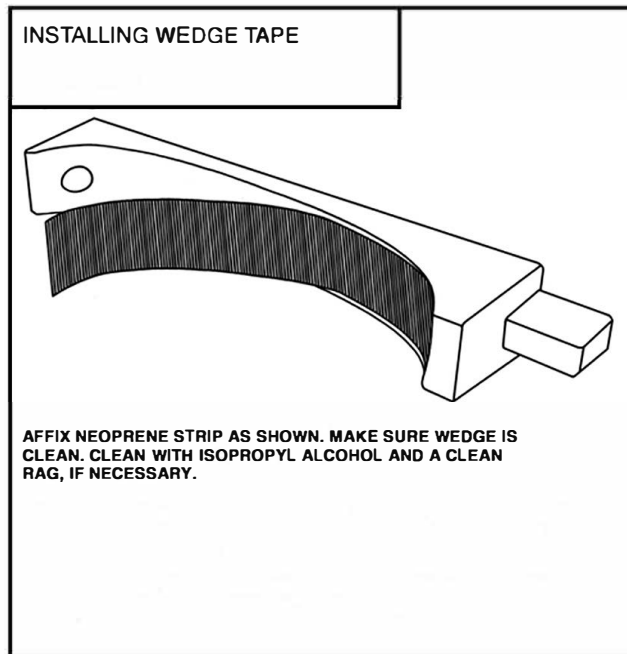

• Please remove Custom Towing Mirrors before entering automatic car washes. Use extra precaution when approaching tight spaces, such as ATM terminals and other drive-through services

