


Subject to alteration without notice

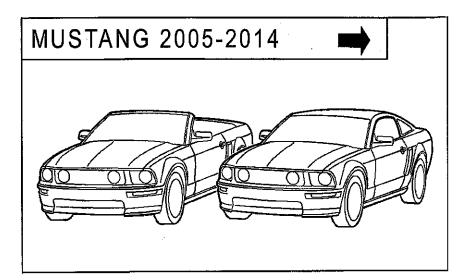



PERSONAL INJURY



VEHICLE DAMAGE




INCORRECT



CORRECT



SEE MANUAL

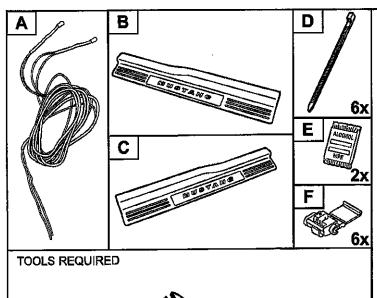

For 2005-2014 vehicles WITHOUT ambient lighting.

Kit includes.

A. 1-Wiring harness

B. 1-RH Scuff plate

C. 1-LH Scuff plate

D. 6-tie straps

E. 2-alcohol wipes

F. 6-quick connects

For 2005-2014 vehicles WITH ambient lighting.

Kit includes:

B. 1-RH Scuff plate

C. 1-LH Scuff plate

E. 2-alcohol wipes

For installation follow steps:

Step 9: Remove RH old scuff, press locking tab to disconnect wire connectors

Step 13: Connect new scuff in existing connector


Step 15: Peel tape liners and install new scuff


Repeat on LH side


PG 1/6


T-3




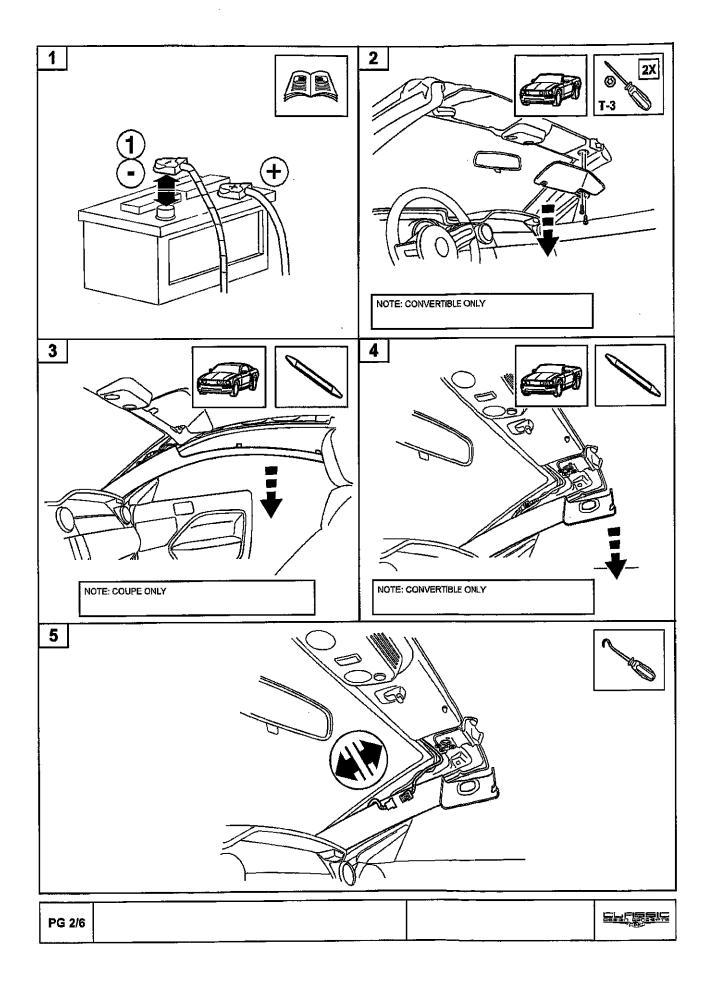

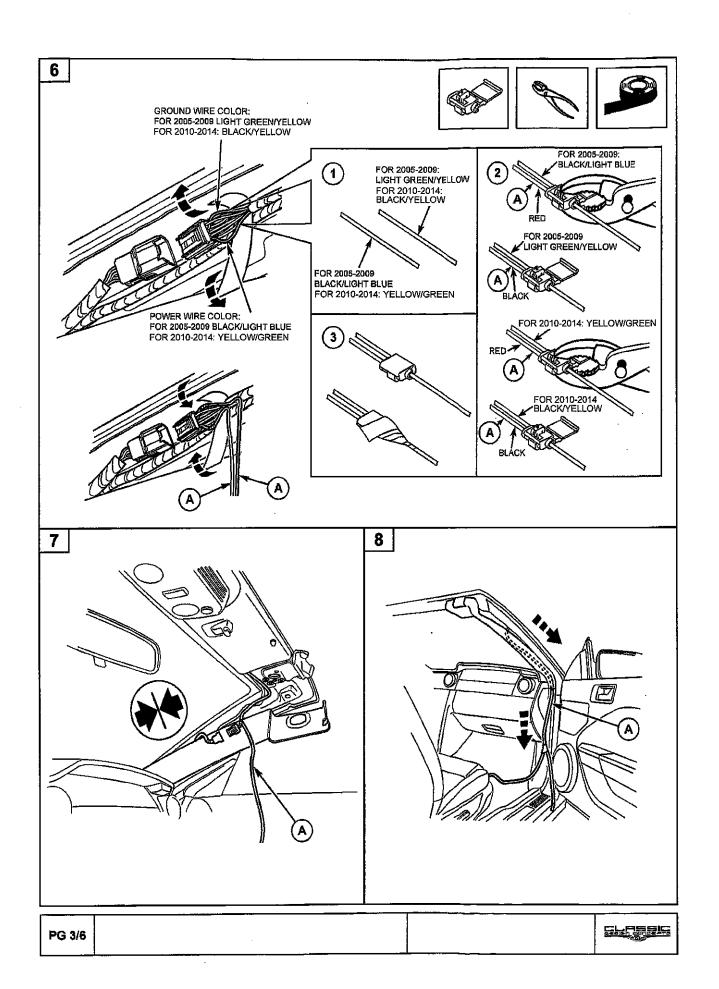

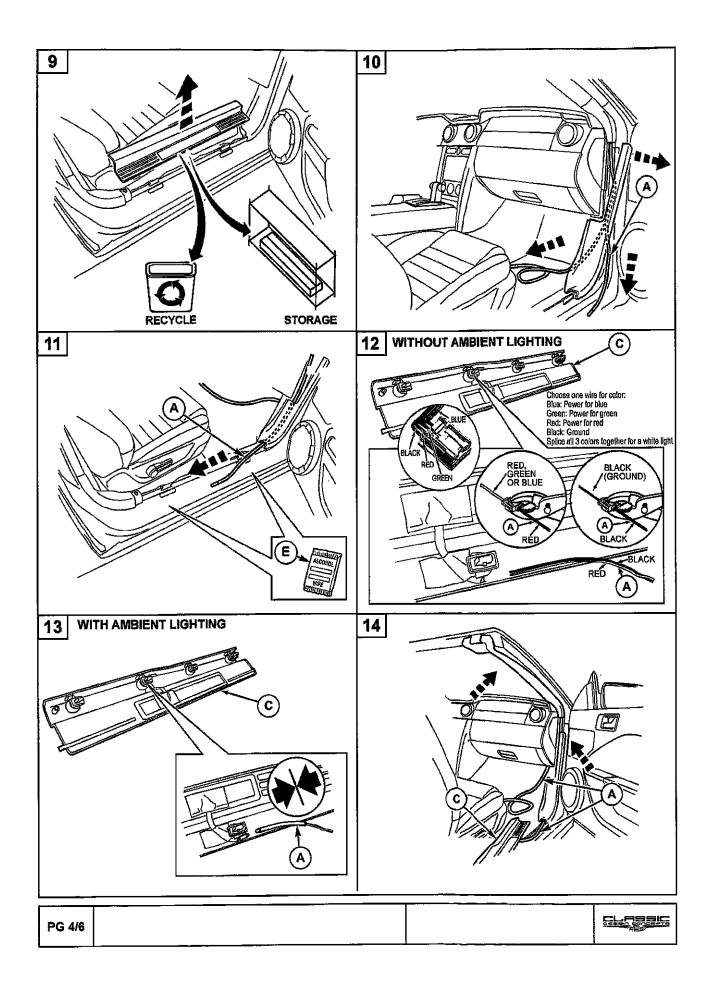

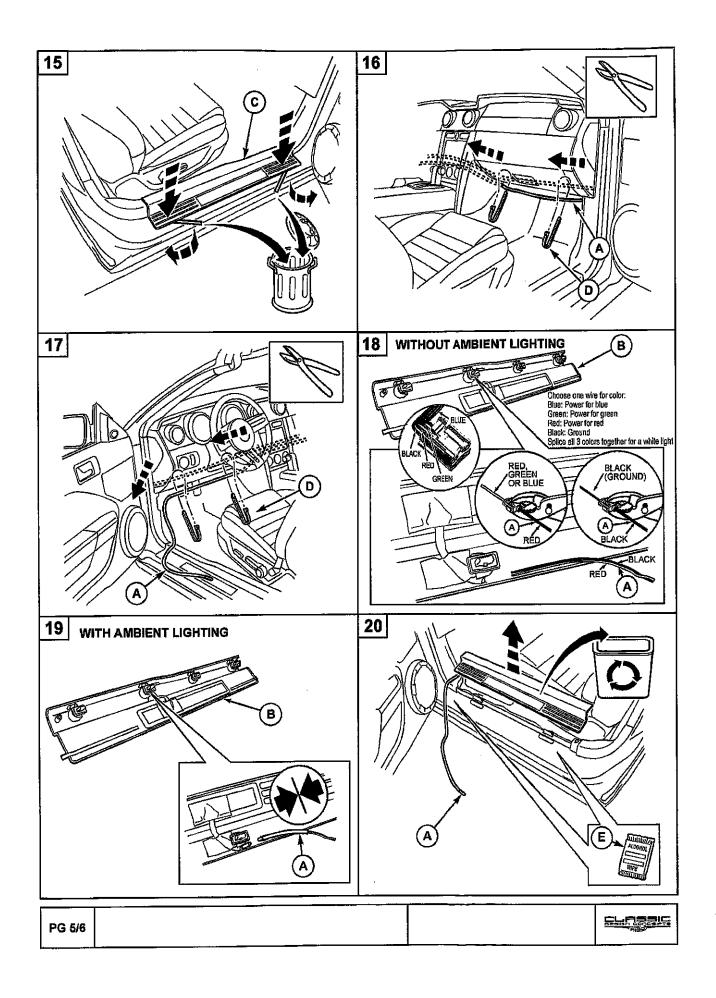

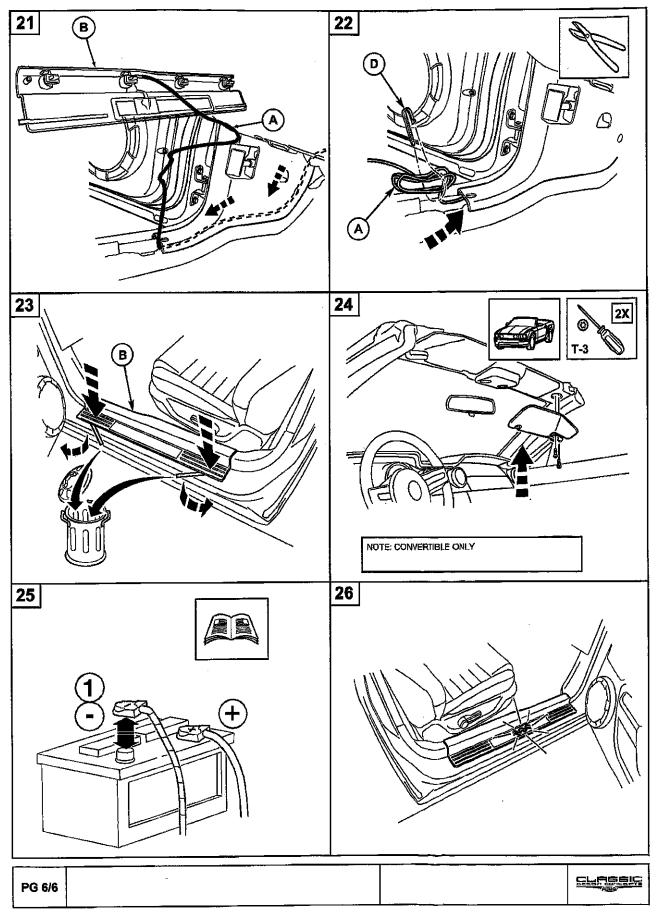

Learn more about chrome trim and accessories we have.