



**2015-17 Outlaw Chin Spoiler**  
**CDC# 1511-7010-01**

\*vehicles with Performance Pack Chin also need supplemental hardware kit #1511-6509-01

**TEST FIT BEFORE PAINTING!!!**

**NOTE:** This product is Injection Molded UV stable TPO. Install as is or if you prefer to paint to match, we recommend a Professional Automotive Paint Facility. Standard Fascia paint processes should be used. We recommend that a **FLEX AGENT** be added to the paint as well.



**Note: READ instructions before starting installation!!!**

**Components:**

- 1 - Outlaw Chin Spoiler
- 1 – Roll 3M ¼” & ½” Acrylic foam tape
- 2 - Alcohol Packs
- 2 – Adhesion Promoter Packs
- 2 – Scrivets

**CDC Part#**

- 1511-2300-01**
- 950035**
- 950006**
- 950007**
- 181700**

**Tools Required:**

- Panel Removal (fork tool)
- Razor knife/blade

Red High Visibility Reflective Tape

Set includes 5 sets of 11 graphics (1 extra set in case of damage / error when installing)



**Installation Procedure**

1. Prepare the front Fascia. Clean the surfaces shown in the pictures using the provided **Alcohol Packs** and allow time to dry. Apply the provided **Adhesion Promoter** to the same areas and allow time to dry.



2. Install the provided **3M Acrylic Foam Tape** as shown in pictures below. **Note:** Apply tape about 1/8" away from fog light bezels and lower grille. Press tape firmly to activate the adhesive. **Important:** Create "pull tabs" with the red backing as shown.



## CD4II3DK

3. Remove factory retainers from wheel liner area, place aside as these will be reused to attach the Chin Spoiler. **NOTE:** You may or may not be able to reuse these fasteners to secure your Outlaw Chin, depending which fastener was used during the assembly. We have **included** (2) Scrivets for your convenience, if needed.



4. Prepare the Tape areas on the back side of the Chin Spoiler as shown. Clean with provided **Alcohol Pack**, allow to dry. Apply the provided **Adhesion Promoter** and allow to dry.




5. Apply the 1/4" **3M Acrylic Foam Tape** as shown, leaving "pull tabs" with the red backing.




CD4II3DK

6. Install **Chin Spoiler**. Place Chin Spoiler on the Fascia, making sure the “pull tabs” are all accessible. Peel red backing and press Chin Spoiler firmly to activate adhesive.

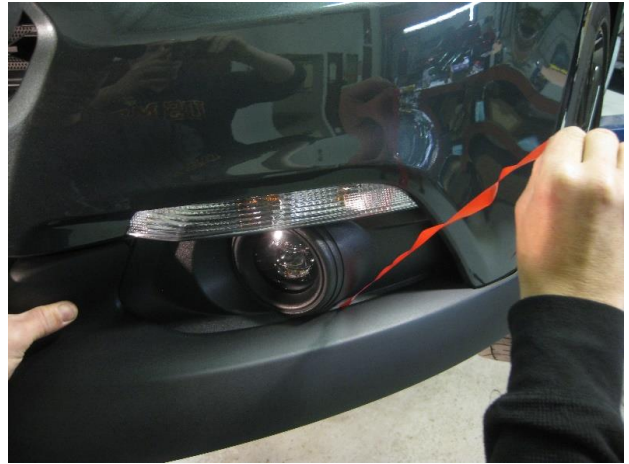

7. Reinstall the factory retainers removed in step #3, or use the provided Scrivets.

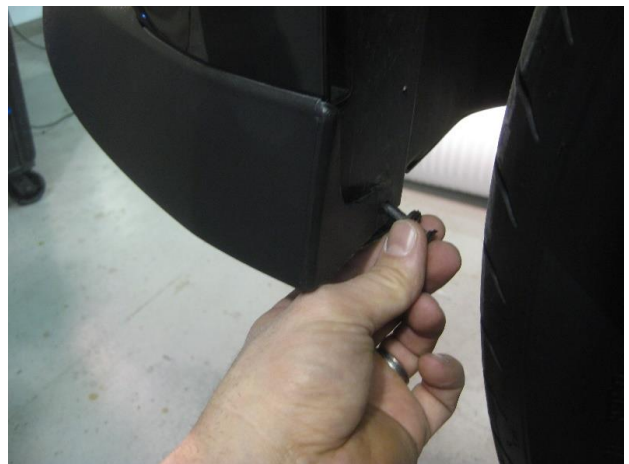


CD4II3DO

# CDC

CLASSIC DESIGN CONCEPTS

**2015-17 Outlaw Chin Spoiler Hardware Kit Supplement**  
**FOR Vehicles Equipped with Performance Pack Chin Spoiler ONLY**  
**CDC# 1511-6509-01**

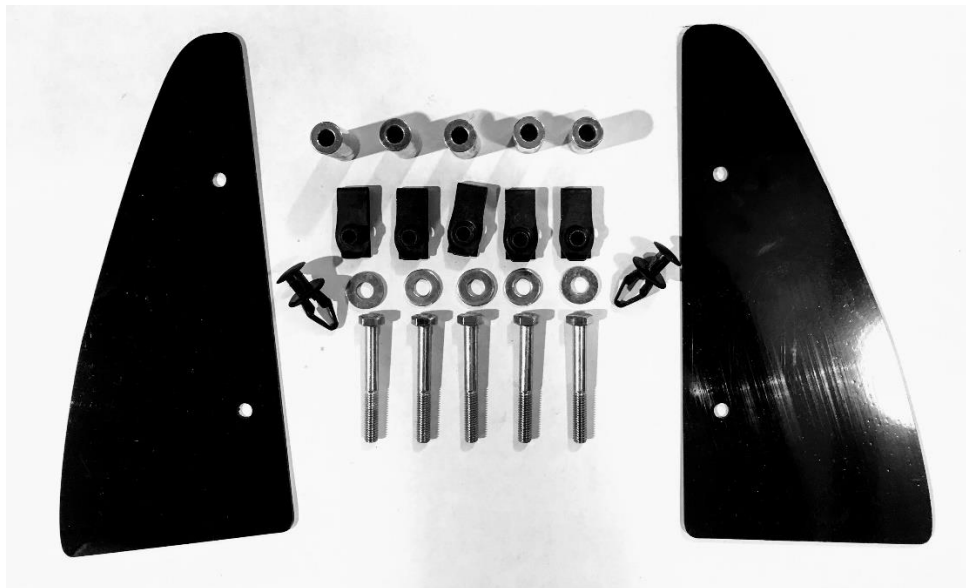

**Note: READ instructions before starting installation!!!**

**Components:**

- 3 – 35mm Aluminum Spacers
- 2 – 25mm Aluminum Spacers
- 5 – M6-1.0 x 50mm Bolts
- 5 – 1/4" Washers
- 5 – M6-1.0 "U" Clips
- 2 – Scrivets
- 2 – Splash Shield Extensions

**CDC Part#**

- 57000
- 57001
- 15006
- 183008
- 50012
- 65005
- 1511-2301-01

**Tools Required:**

- Panel Removal (fork tool) •7mm Socket •1/4" drive ratchet •1/4" Drill •5/16" Drill •Drill motor
- Razor knife/blade •Pick tool •10mm Socket •Jack Stands •Jack