

# CLIMART

## SIDE WINDOW DEFLECTORS

**Before installing the deflector, please, read the manual.  
Incorrect installation of deflectors can cause danger or injury.**

### CAUTION! IMPORTANT INFORMATION!



**CAUTION!** Before installation, make sure the deflectors are compatible with your vehicle. The size and modification of each set is unique and never universal.

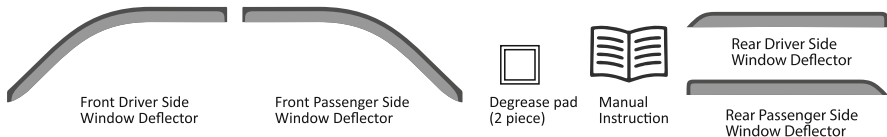
- In case you having hard time to adjust the deflector please follow the procedures below:
  - Make sure you install the deflector on the correct side of the vehicle. Otherwise, try to install the deflector on the other side.
  - Try to adjust the position of the deflector by moving it up/down or sideways.
- Before the trip, make sure the deflectors are securely installed.
- Do not use automatic car washing machines.
- Do not use cleaners that contain dissolving agents.
- It is recommended not to wash the vehicle for the first 24 hours after installation, as it can cause detaching.

### Contents (according to the purchased set):

#### 2 Piece Set (the product may differ from the shown in the instruction)

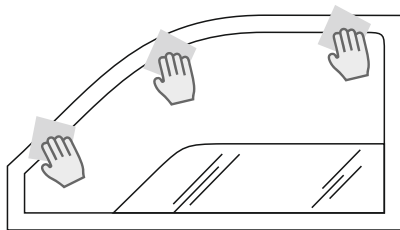


#### 4 Piece Set (the product may differ from the illustration in the instruction)



### Preparing the vehicle and the product for installation

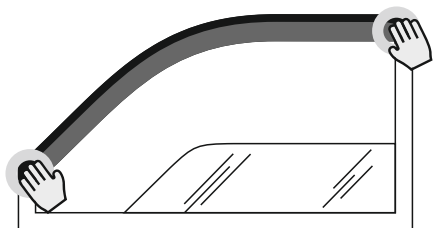
- **CAUTION!** Before installing the deflector, make sure the deflector is compatible with your car model.
- Attach the deflector to installation point BEFORE removing the tape protective liner. Make sure the deflector looks harmonious on the door of the vehicle.
- Make sure the installation point is absolutely dry and clean (take care to remove any possible dirt and/or dust).
- Deflectors are recommended for installation indoor without direct sunlight and moisture, temperature in range from +15°C to +25°C (from +59°F to +77°F).

**1**

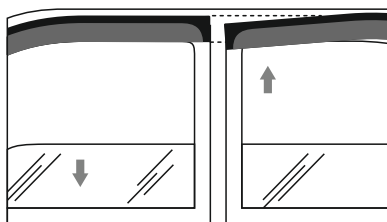
Wipe the installation point with the degrease prep-pad provided in the set (**CAUTION!** If you neglect this step deflectors won't be installed properly resulting in detaching from the vehicle door).

**2**

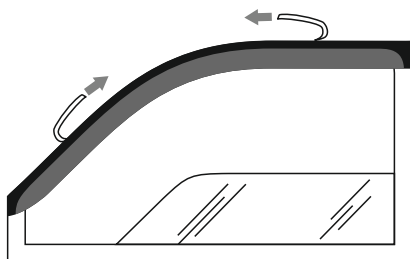
Remove 1 inch (2 cm) of the tape liner from the both flanges (front and rear) of the deflector.

**3**

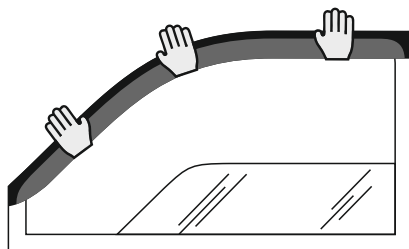
Attach the deflector and press it slightly to the best suited installation point (in your view) at the vehicle door.

**4**

If you have 4 Piece Set, first attach FrontDriver Side Window Deflector and then the rear one. Align height of the rear deflector and front. Both parts should visually produce one straight line.

**5**

Totally remove the tape protective liner by pulling on free ends on the installed and aligned deflector(s) in sliding manner.

**6**

Tightly press the deflector to the installation point from one flange to another.



To avoid loose detaching of deflector(s) shortly it **SHOULD NOT** be removed and attached again to a vehicle door. Do the same (re-do steps 1-5) for the Opposite Side of the vehicle.

### Maintenance and cleaning

- The deflector is durable and flexible. **CAUTION!** To prevent scratches on deflectors we recommend not cleaning deflectors frequently with dry hard while washing, cleaning and dusting the vehicle.
- The recommended vehicle speed within 72 hours after installation is no more than 55 m/hr.
- Do not drive the vehicle for 24 hours after installation for better adhesion (cohesion) between the deflector and the vehicle door.
- Keep the vehicle out of direct sunlight, rain or snow during 24 hours after deflectors' installation.

### Congratulations!

**Your Unique Durable deflectors CLIMART are installed and gives joy to you with it! From this moment you could enjoy their appearance!**

We are glad to work for you and your vehicle to produce high quality products, which have ideal fitment, easy installation and you could enjoy using them every day.

**CLIMART**  
SIDE WINDOW DEFLECTORS

Discover other rain guards and wind deflectors on our website.