

Fitting instructions

Ford Focus II	04→
Volvo C70 II Cabrio	05→
Volvo S40	04→
Volvo V50	04.04→







The Perfect Change.

80000062 / 80000061

CC1153 / CP1153

MC 645/681 / MP 145/181

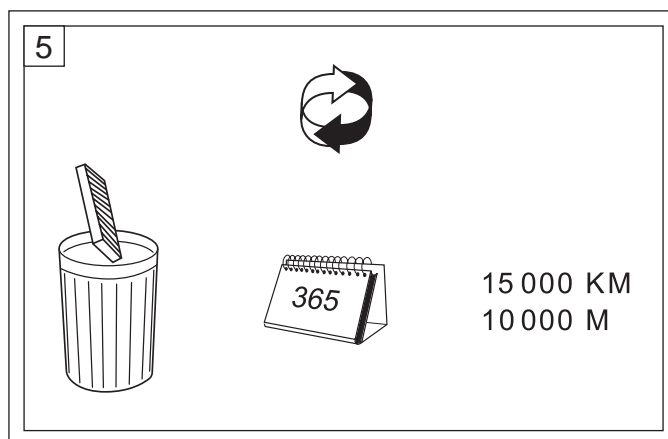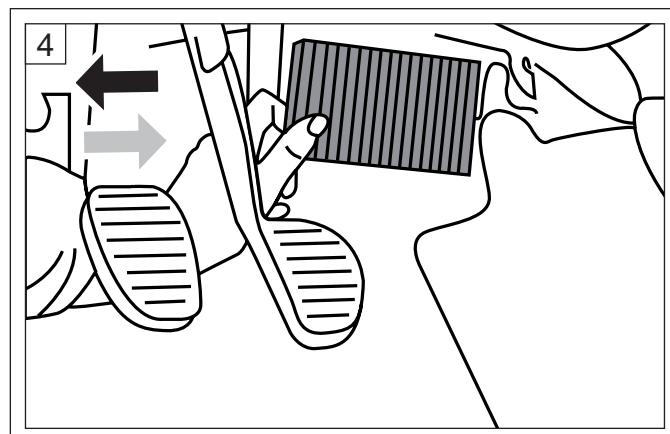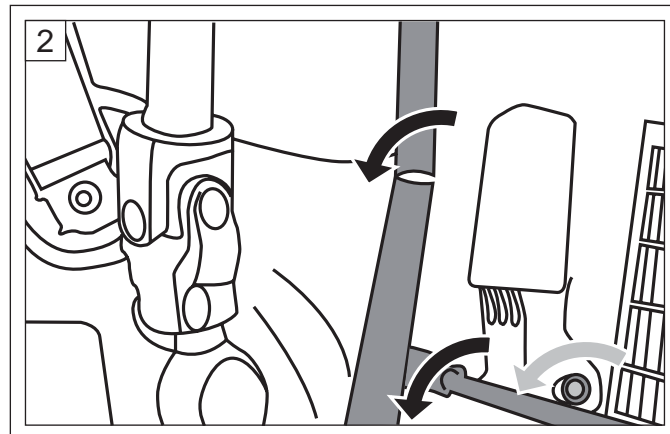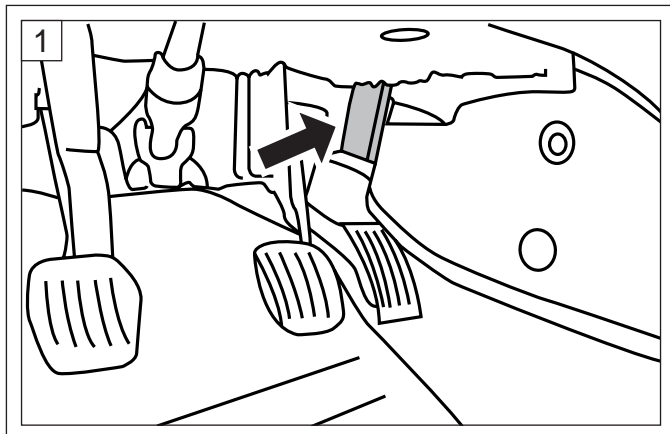

Fitting instructions

Ford Focus II	04→
Volvo C70 II Cabrio	05→
Volvo S40	04→
Volvo V50	04.04→







The Perfect Change.

80000062 / 80000061

CC1153 / CP1153

MC 681 / MP 181

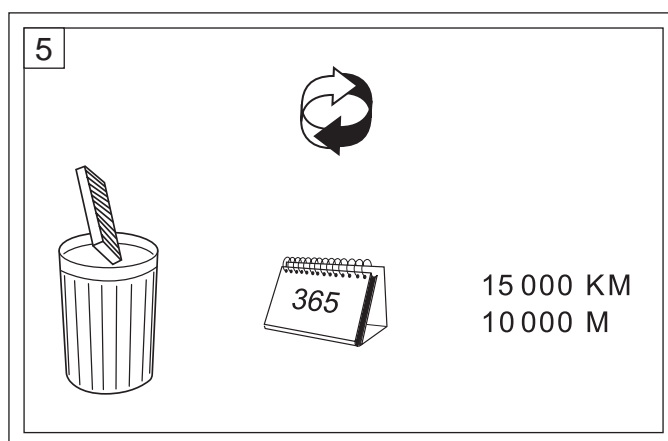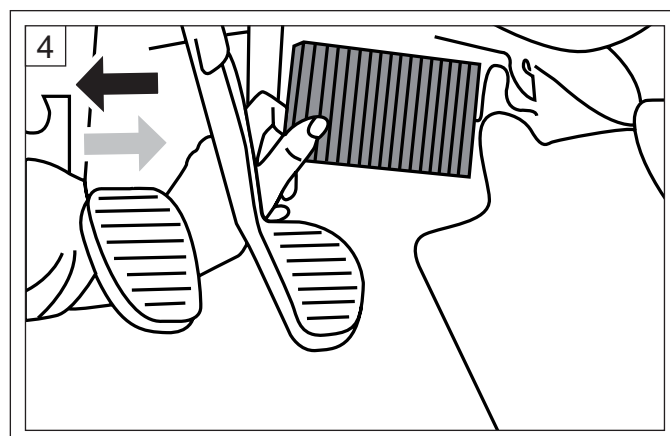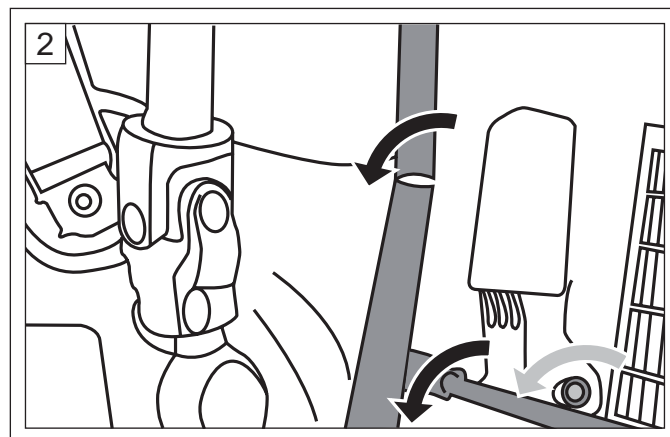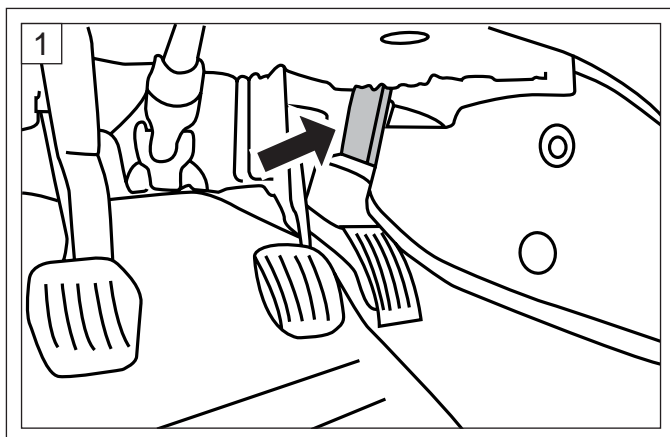


Replacement interval ...



15.000 KM /

10.000 MI

... or after 1 year

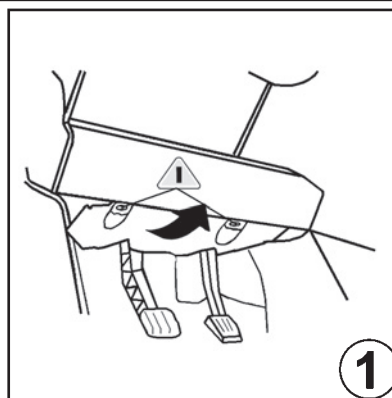

Attention:
After taking out lining
remove Accelerator pedal

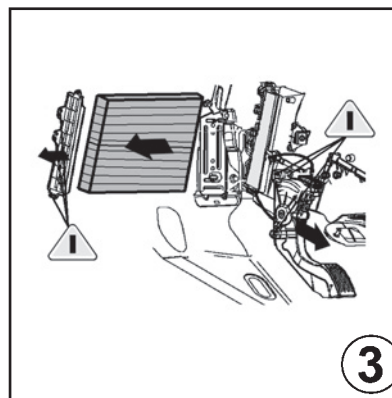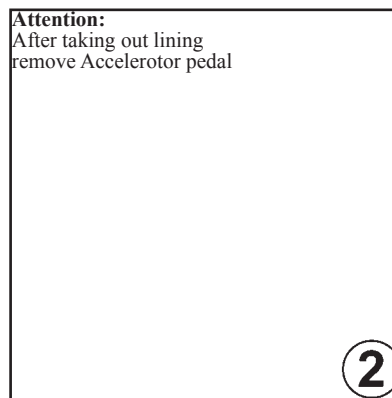

Ford Focus 10.04 ➔

MC 645

MP 145