

Fitting instructions

| | |
|---------------------|---------|
| Ford Focus II | 04 → |
| Volvo C70 II Cabrio | 05 → |
| Volvo S40 | 04 → |
| Volvo V50 | 04.04 → |







The Perfect Change.

80000062 / 80000061

CC1153 / CP1153

MC 681 / MP 181

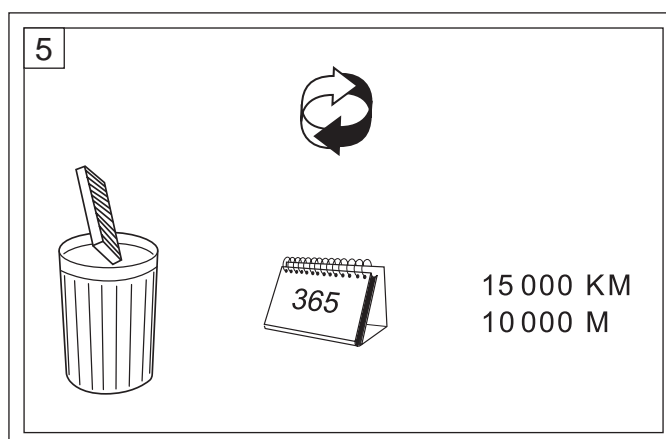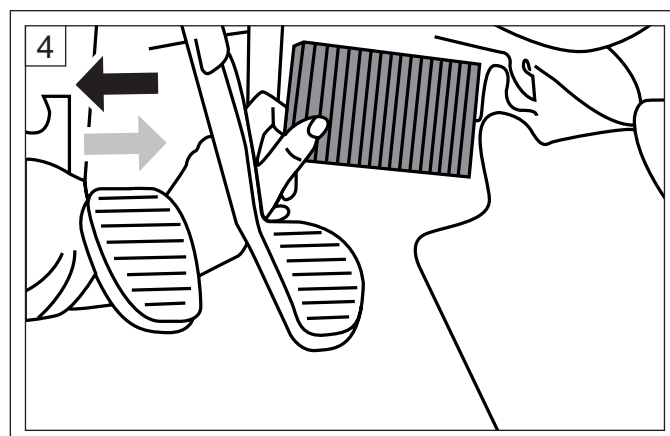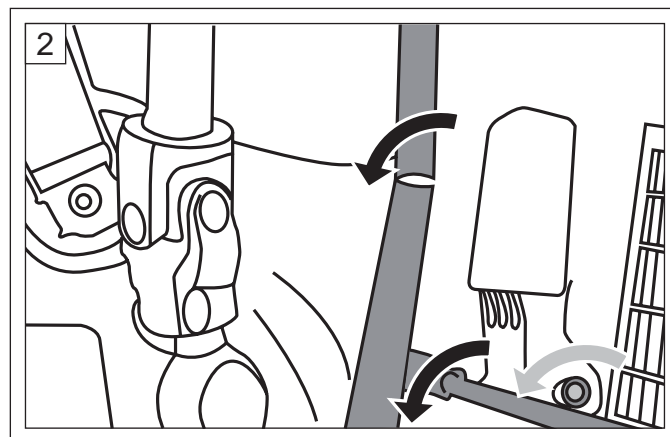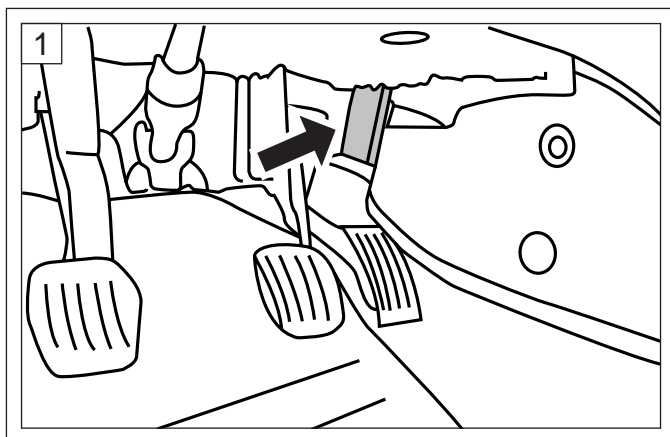

Ford

Ford


micronAir®

Replacement interval ...



15.000 KM /

10.000 MI

... or after 1 year

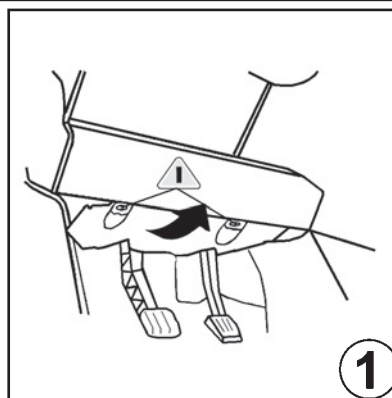

Attention:
After taking out lining
remove Accelerator pedal

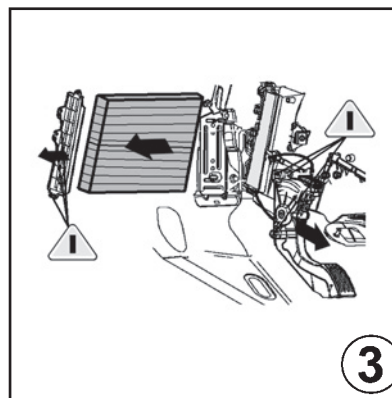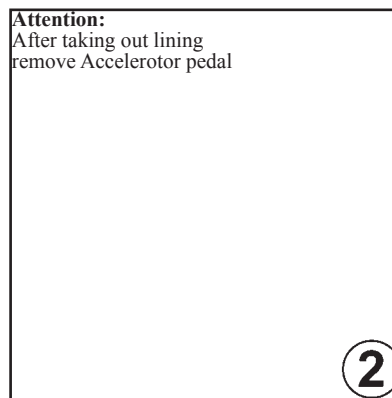

Ford Focus 10.04 ➔

MC 645

MP 145