

Fitting instructions

Audi A8 03→










The Perfect Change.

21652898 / 80000343

CC1191 / CP1191

MC 856

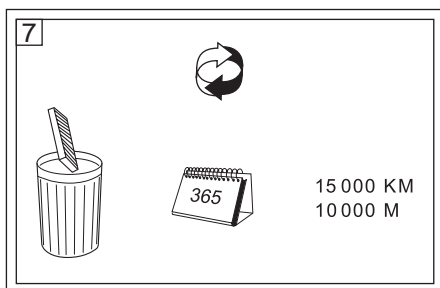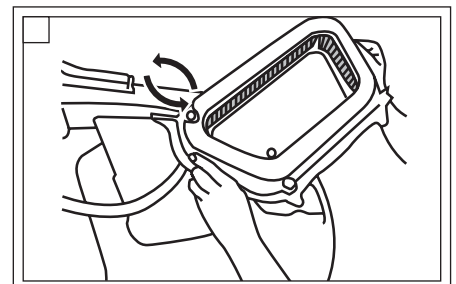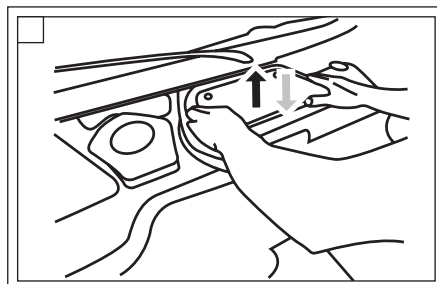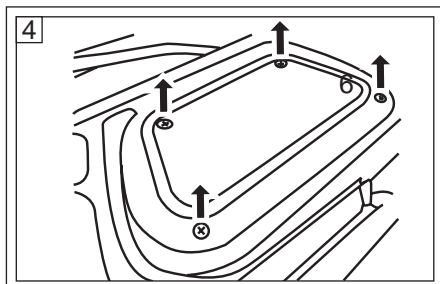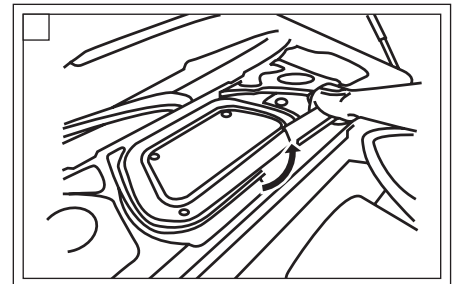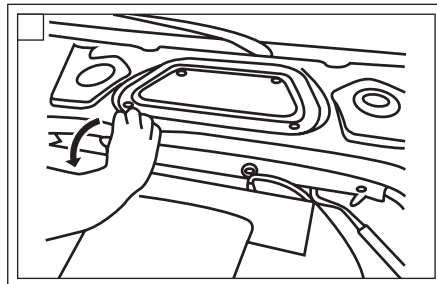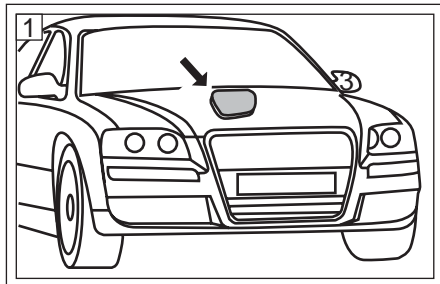



The Perfect Change.

10-20 min

