

Fitting instructions





Audi A6 (C6)
Audi A6 Avant
Audi R8

04.04 →
02.05 →
07 →



The Perfect Change.

21653066 / 21653067
CC1139 / CP1139
MC 685-2 / MP 185-2

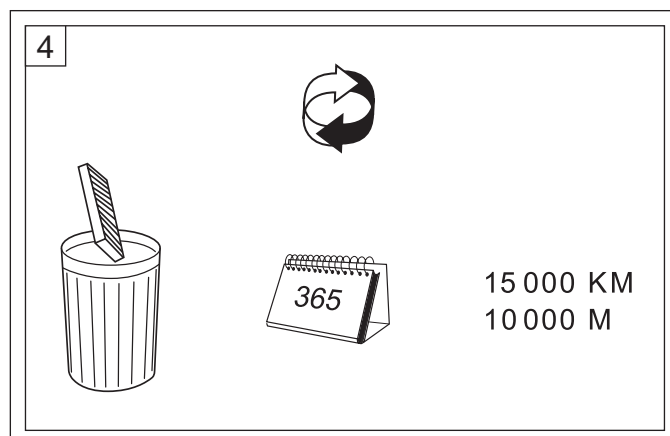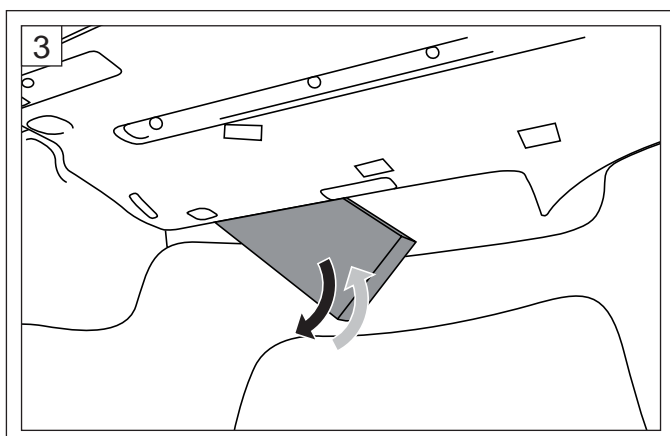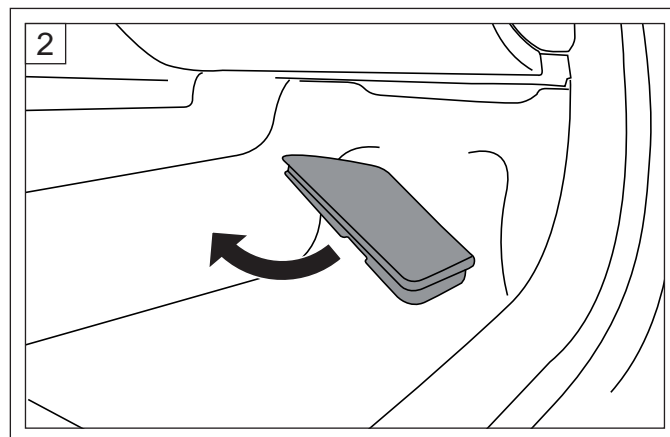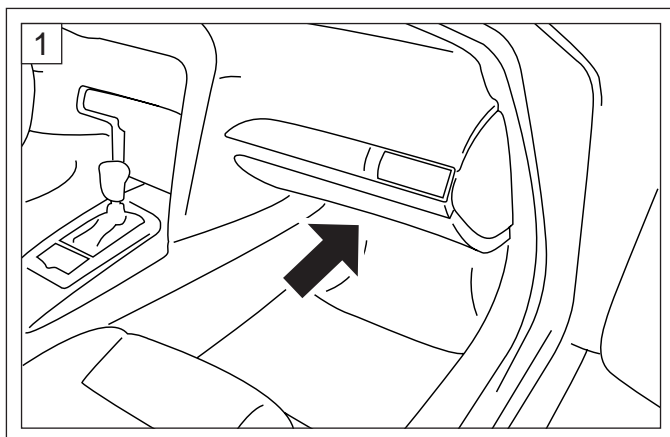

Fitting instructions

CORTECO

21653067
21653066



Audi A6 (C6)

05.04 →

Audi R8

05.07 →

The Perfect Change.

10-20 min

