

Fitting instructions

CORTECO

80000847
80000848




BMW X5 (E70)








03.07 →

BMW X6 (E71)

05.08 →

The Perfect Change.

 < 10min

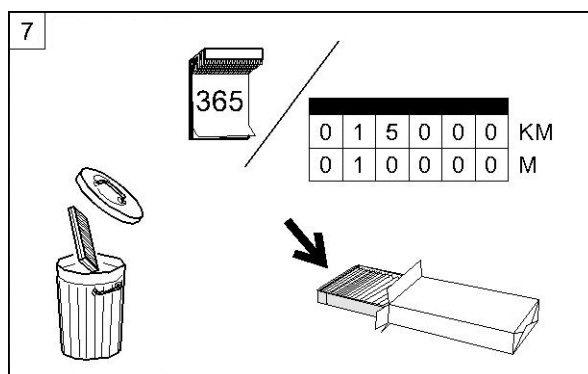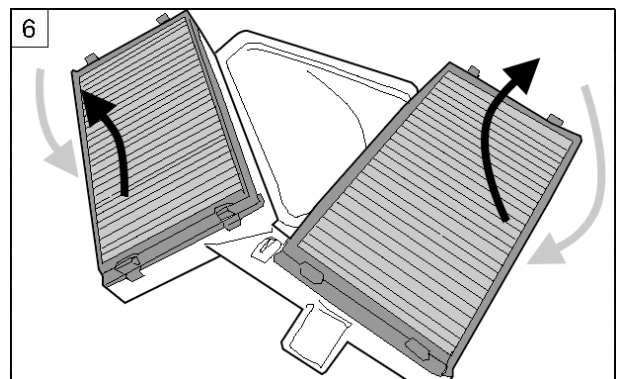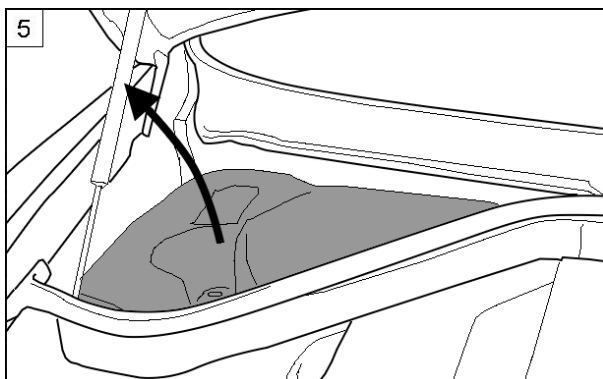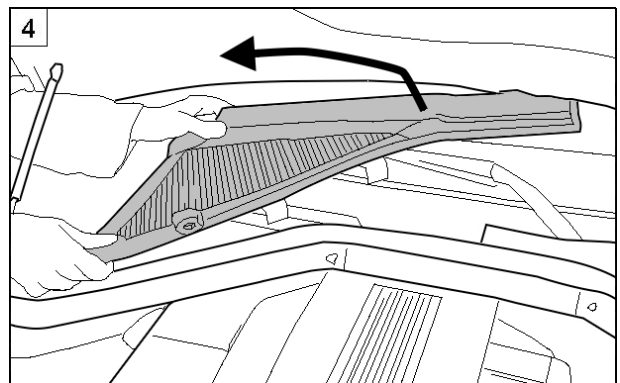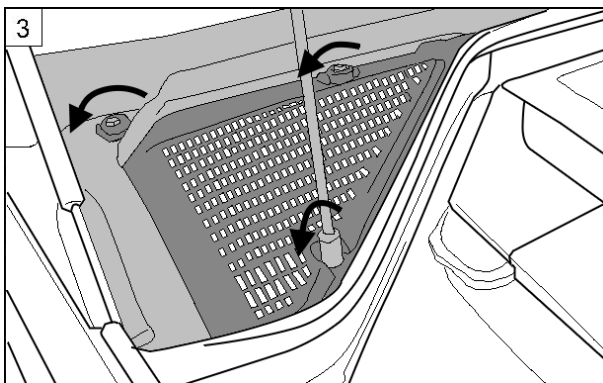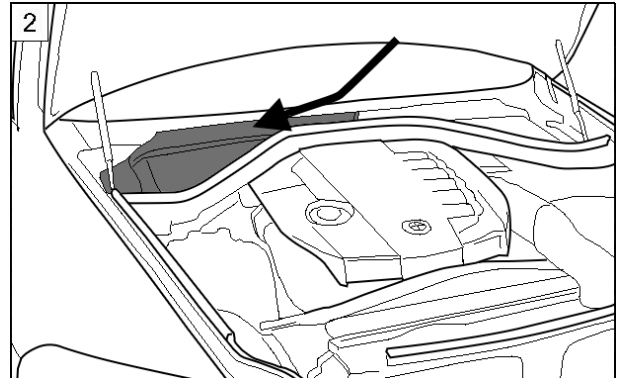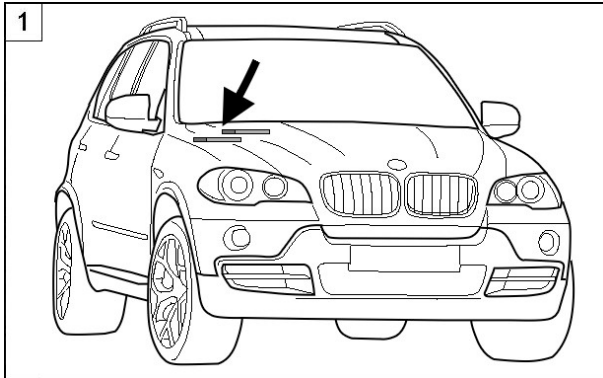



The Perfect Change.

80000848 / 80000847

CC1283 / CP1283

MC 859-2 / MP 359-2

