

Fitting instructions

CORTECO

21653063

21653064

BMW 6er / 6 series (E63 – E64)

01.04 →













BMW 5er / 5 series (E60 – E61)

07.03 →



The Perfect Change.

 10-20 min

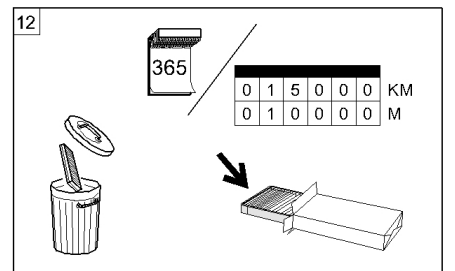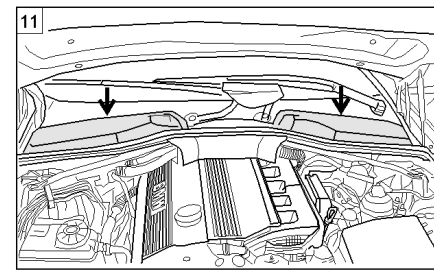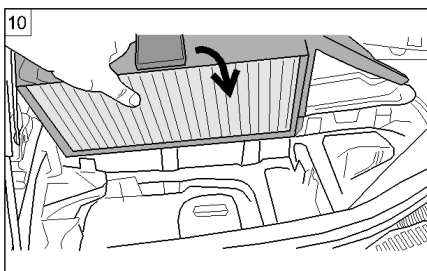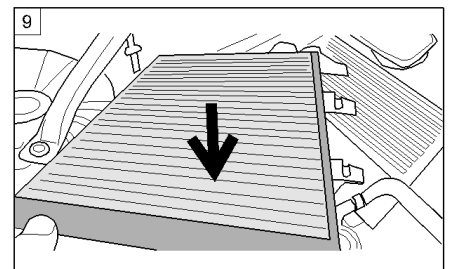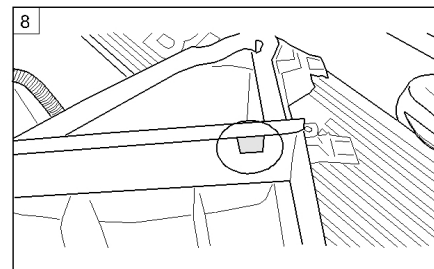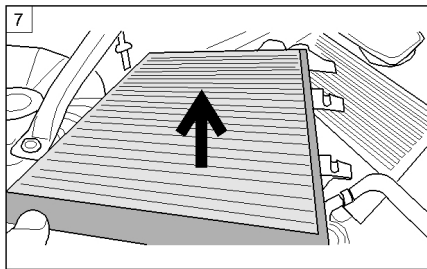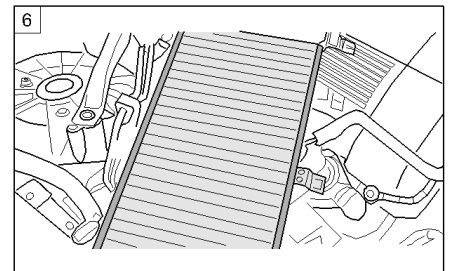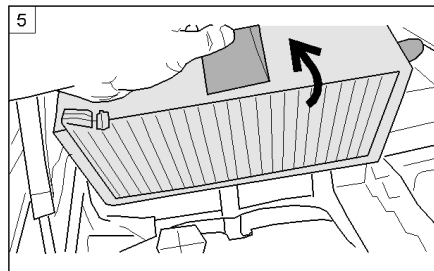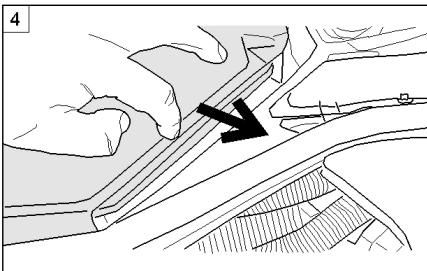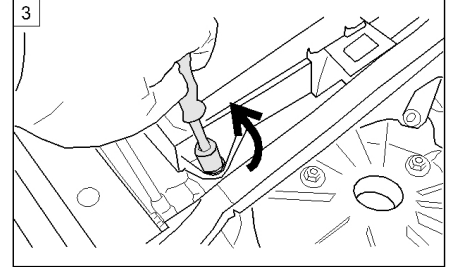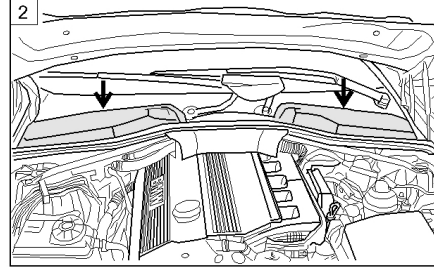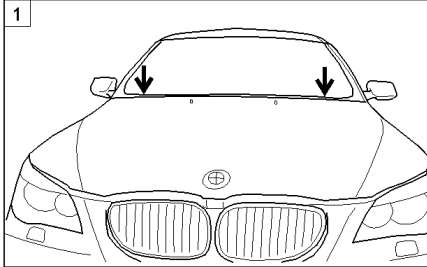

BMW 5er (E60)	07.03 ➡
BMW 5er Touring (E61)	06.04 ➡
BMW 6er Coupé (E63)	01.04 ➡
BMW 6er Cabrio (E64)	04.04 ➡

MP

MC 666-2




BMW 5er, 6er

Replacement interval ...

15.000 km /
10.000 mi

... or after 1 year

BMW

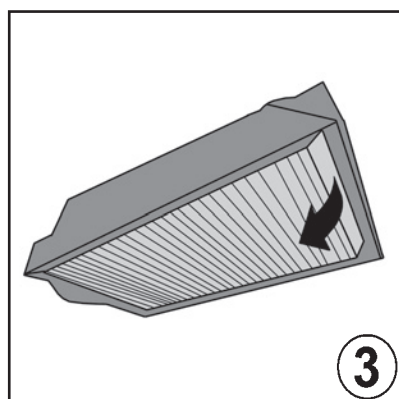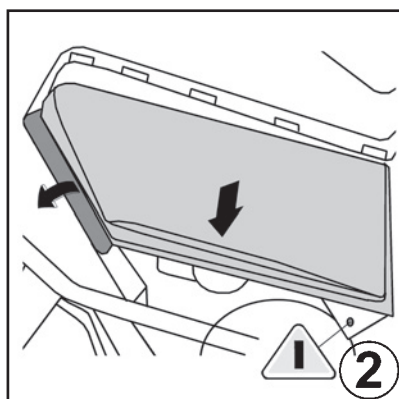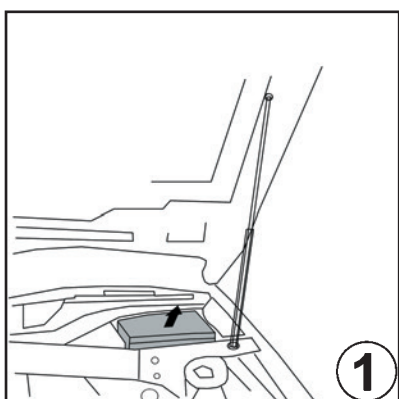

BMW

