

Fitting instructions

CORTECO

**21653063
21653064**

BMW 6er / 6 series (E63 – E64)

01.04 →













BMW 5er / 5 series (E60 – E61)

07.03 →



The Perfect Change.







10-20 min

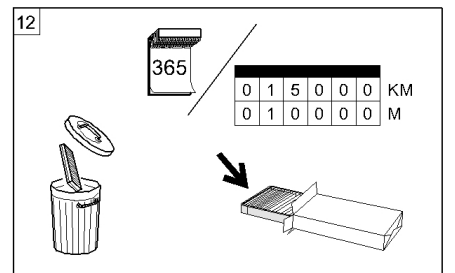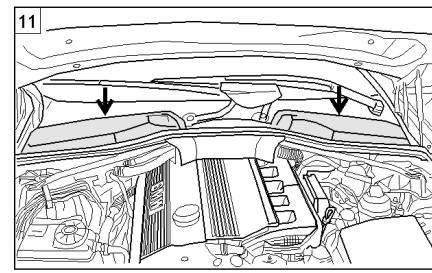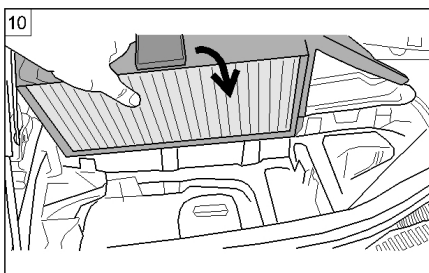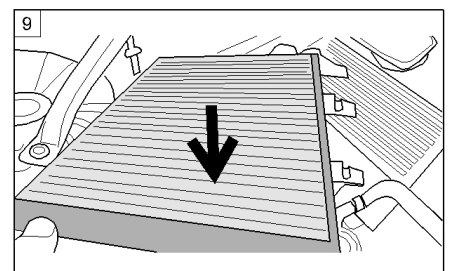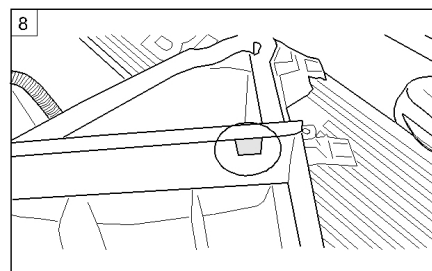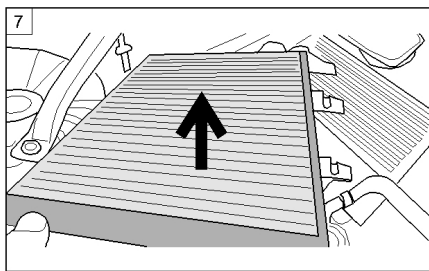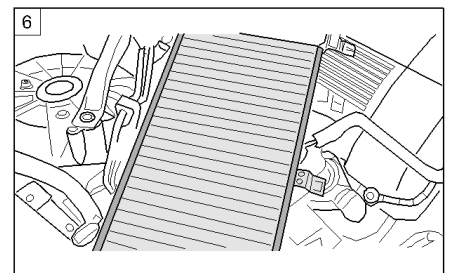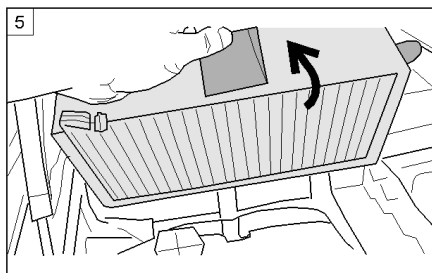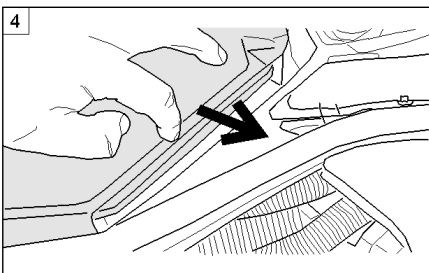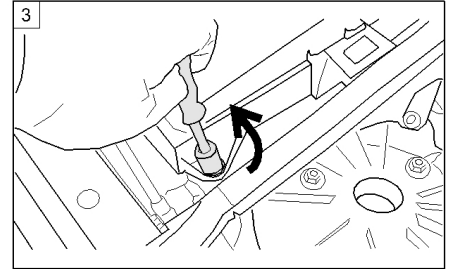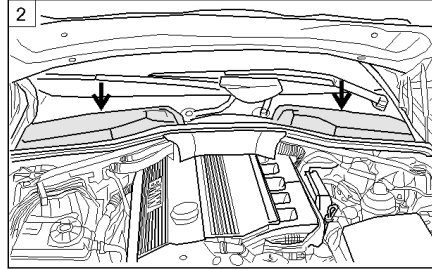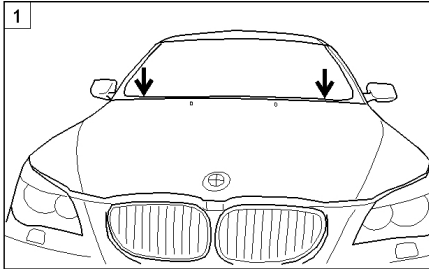

BMW

BMW

micronAir®

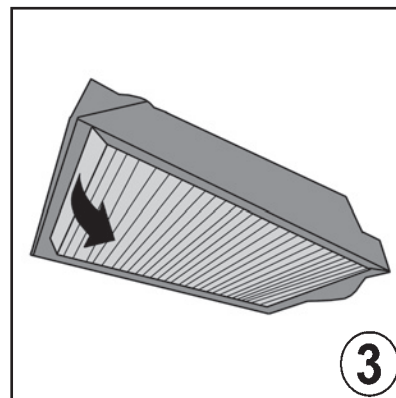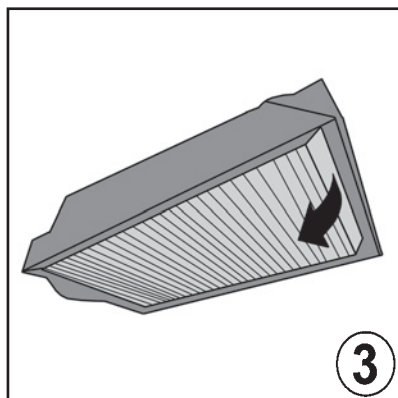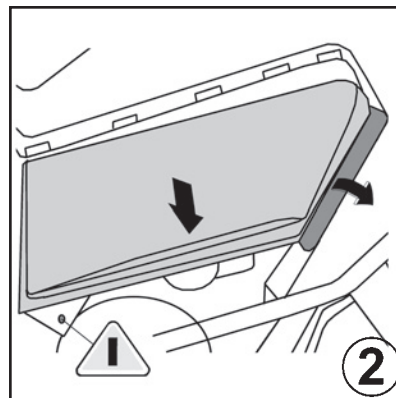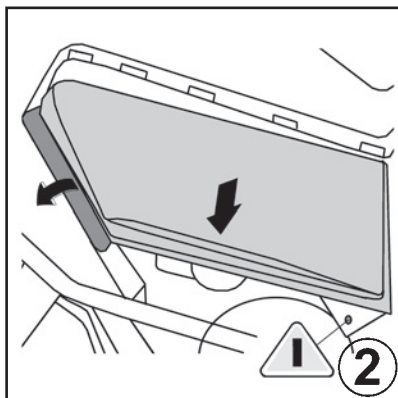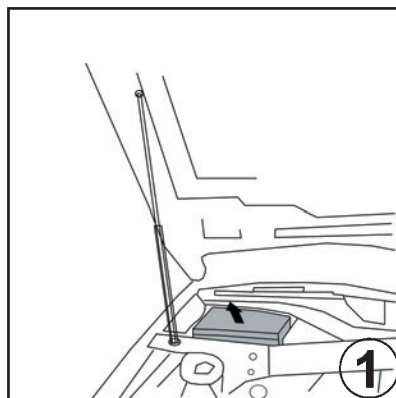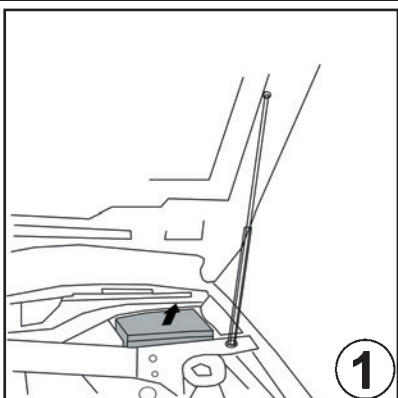

- BMW 5er (E60) 07.03 ➔
- BMW 5er Touring (E61) 06.04 ➔
- BMW 6er Coupé (E63) 01.04 ➔
- BMW 6er Cabrio (E64) 04.04 ➔

BMW 5er, 6er

Replacement interval ...

15.000 KM /

10.000 MI

... or after 1 year