

Fitting instructions

CORTECO

80000879
80000880









The Perfect Change.

Audi A5
Audi A4
Audi Q5

07 →
11.07 →
11.08 →

10-20 min

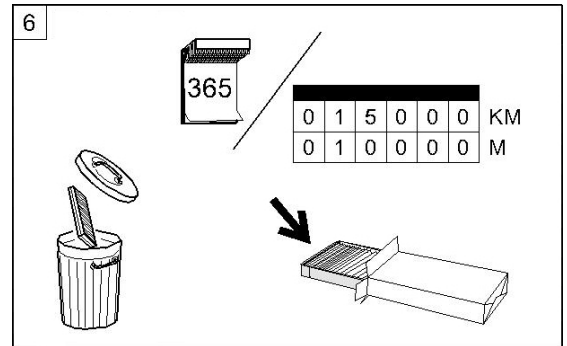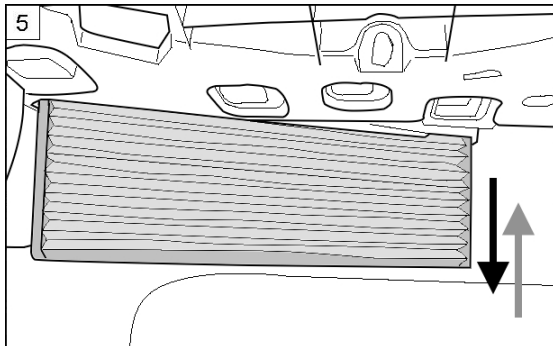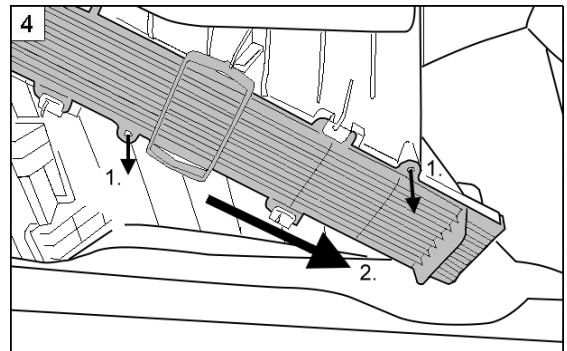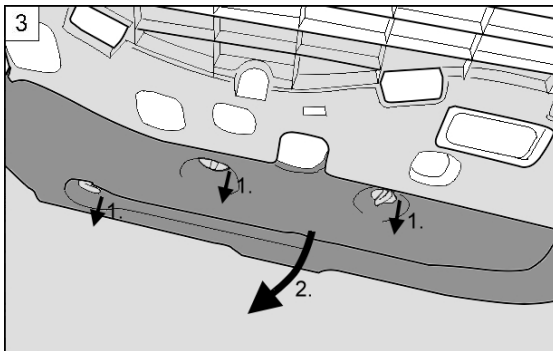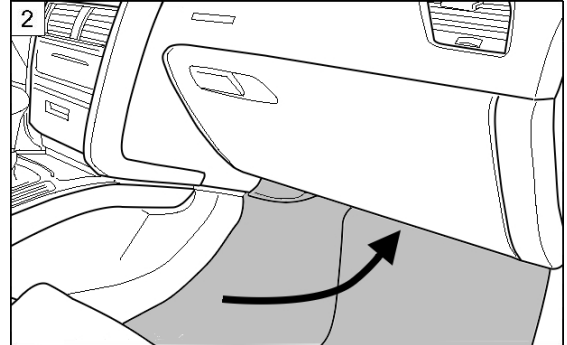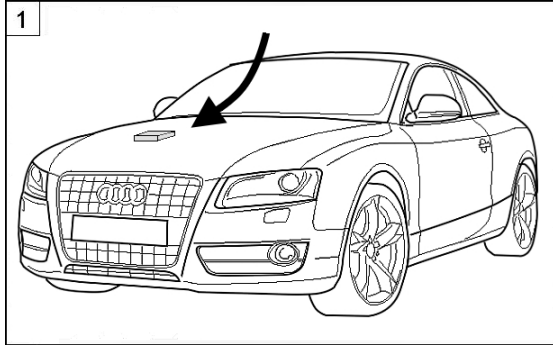

Fitting instructions

Audi A5
Audi A4

07 →
11.07 →



The Perfect Change.

80000880 / 80000879
CC1309 / CP1309
MC 771 / MP 271

