

Fitting instructions

Dodge Sprinter	06.05 →
Mercedes-Benz	
Sprinter NCV3	06.05 →
Volkswagen	
Crafter LT 3	06.05 →








The Perfect Change.

80000616 / 80000614

CC1233 / CP1233

MC 677 / MP 177

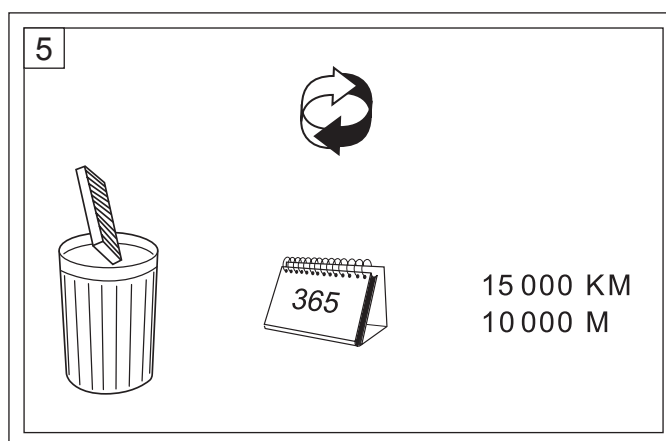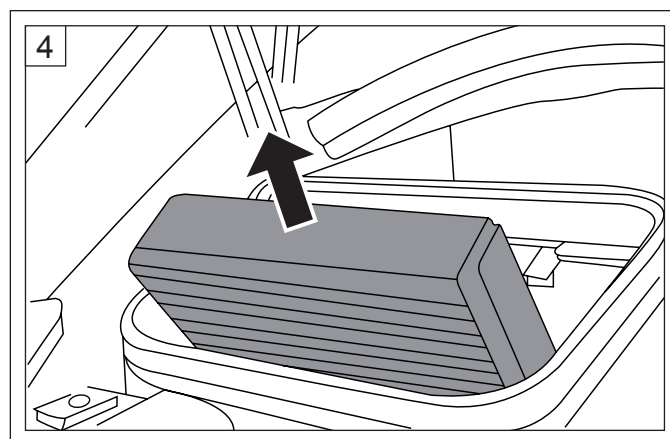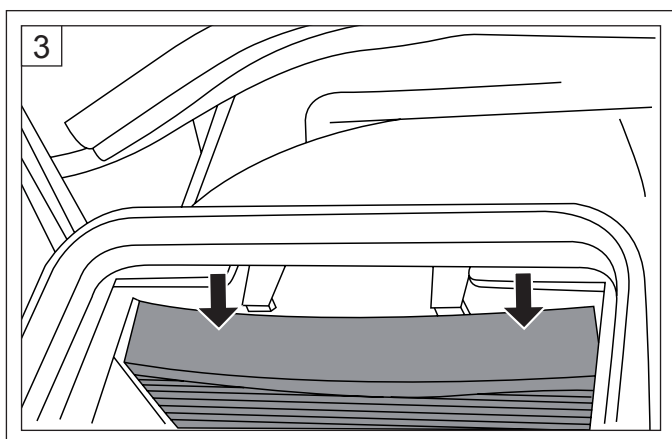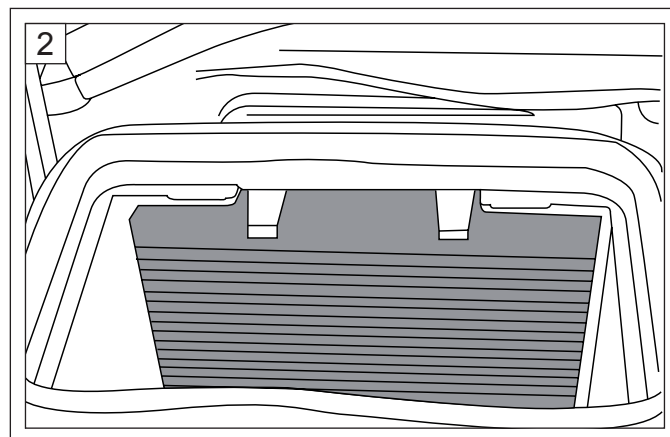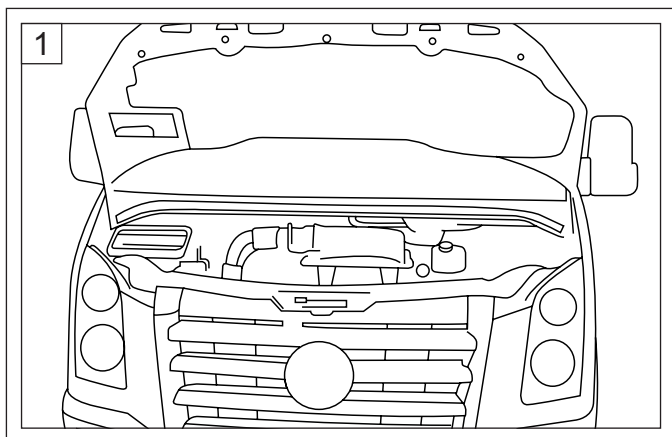

micronAir