SPIDY GEAR.

STEP 1. Attach plastic hooks to corners and sides of webb as shown in Figure 1.

NOTE: Additional plastic hooks may be purchased separately.
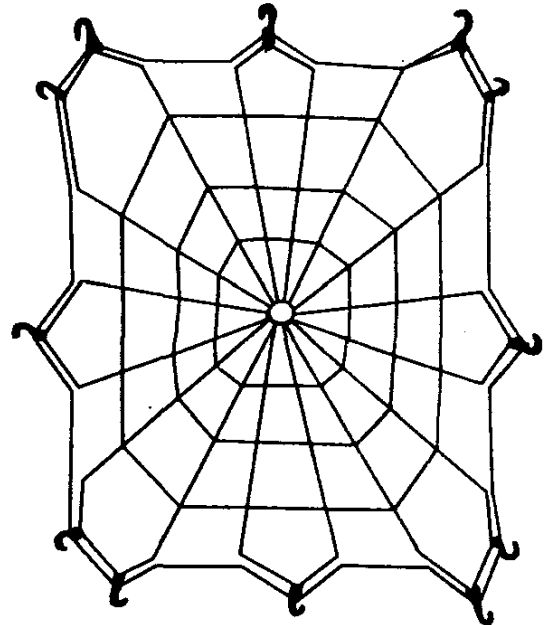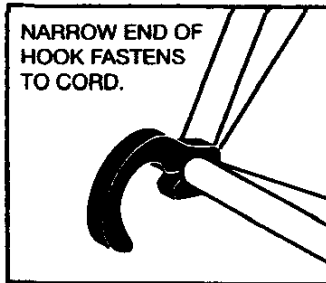
NARROW END OF HOOK FASTENS TO CORD.

FIGURE 1

STEP 2. Place webb over luggage rack as shown in Figure 2. Fasten hooks to cross bars and/or rings. Attach corners first, followed by front and rear hooks. Secure side hooks last.

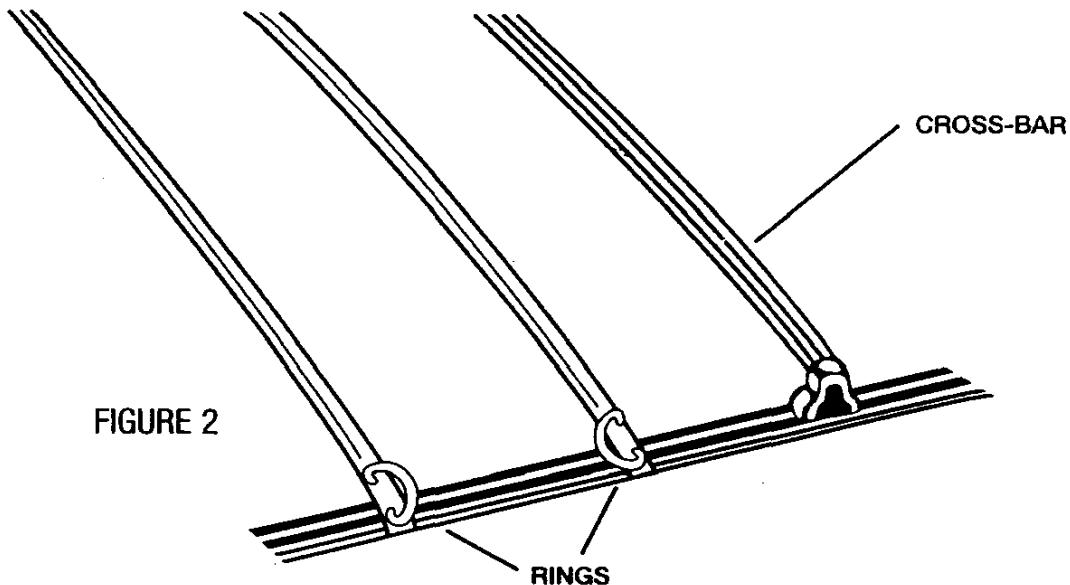*NOTE: Webb may be installed cross-wise for varying sizes and heights of loads.*

CROSS-BAR

FIGURE 2

RINGS

WARNING: Hold cord and hooks firmly when stretching the webb. Rebounding hooks or webb may cause injury.

Looking for dependable roof racks and cargo carriers? Rely on Covercraft for quality and long-lasting products.