ECURT The FIRST Name in Towing Products TO INSTALLATION INSTRUCTIONS

51456 APPLICATIONS

Make Toyota Model Tundra NOTE

All steps must be followed to ensure the CURT brake control harness will function properly. Once installed, test for proper function by following the brake control unit instruction manual.


BRAKE CONTROL HARNESS



BRAKE CONTROL HARNESS LOCATION GUIDE

Representative vehicle shown below

BH4 - To the right of steering column, behind three button panel

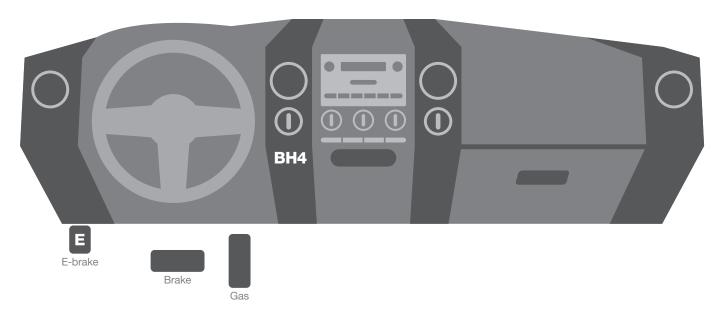

INSTALLATION

Step 1

Remove the panel below the three button panel. Start at the top left corner near the steering wheel, pulling outward, releasing the tabs that are holding the panel in place one at a time (A,B).

Step 2

Repeat step two for the three button panel (C).

Step 3

Locate the white, vehicle brake control harness connector behind the three button panel (D). The connector will be similar to that on the CURT brake control harness. Insert the connector on the CURT brake control harness into the vehicle connector. Make sure the connector is fully inserted with locking tabs in place (E).

Step 4

Route the brake control harness along the back of the dash and out the bottom to the brake control unit. Insert the brake control harness's black connector into the brake control's quick plug connector (F). Secure the brake control harness with the provided cable ties, avoiding any pinch points.

Step 5

Reinstall the removed panels from Steps 1 and 2.

Step 6

Complete the installation using the brake control instructions. Mount the unit as directed and perform test procedures as instructed in the brake control user manual.

