

# INSTALLATION INSTRUCTIONS

## 51460 APPLICATIONS

Make	Model
Jeep	Cherokee

## NOTE

All steps must be followed to ensure the CURT brake control harness will function properly. Once installed, test for proper function by following the brake control unit instruction manual.

## BRAKE CONTROL HARNESS



## BRAKE CONTROL HARNESS LOCATION GUIDE

### Representative vehicle shown below

**BH1** - Under dash, left of steering column, near emergency brake pedal



**E**  
E-brake

**BH1**  
Brake

Gas

# INSTALLATION



## Step 1

Locate the white, vehicle brake control harness connector. The connector will be similar to that on the CURT brake control harness. You will find the connector underneath the dash, just to the left of the steering wheel, taped to another harness near the emergency brake pedal.

**Note:** In some cases it may be easier to locate the vehicle connector if you partially remove the small trim panel located in front of the vehicle electric brake control connector location. Remove the Phillips screw securing the trim panel in place (A).

## Step 2

Once the electric brake control connector is located, check to see if there is foam padding on the connector. If there is, remove the padding for the installation.

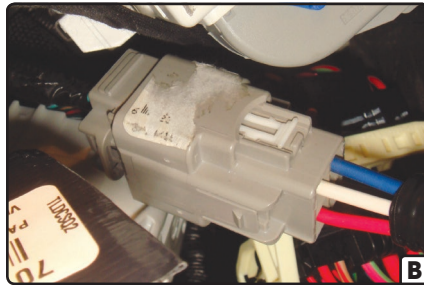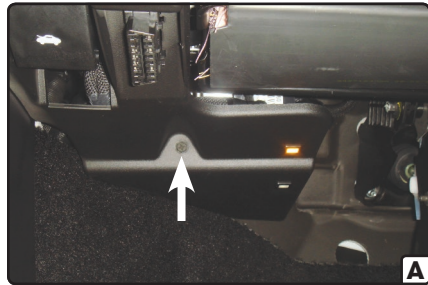

## Step 3

Insert the connector on the CURT brake control harness into the vehicle connector. Make sure the connector is fully inserted with locking tabs in place (B). If it was removed, reinstall the removed panel from Steps 1.

## Step 4

Insert the brake control harness's black connector into the brake control's quick plug connector. Secure the brake control harness with the provided cable ties, avoiding any pinch points.

## Step 5

Complete the installation using the brake control instructions. Mount the unit as directed and perform test procedures as instructed in the brake control user manual.