

55240


CHEVROLET EXPRESS
GMC SAVANA

WIRING LOCATION GUIDE



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

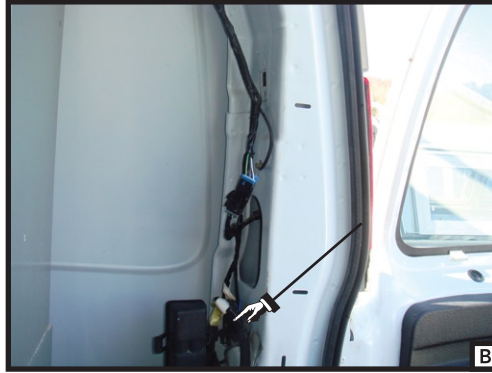

1. Open the rear doors of the vehicle and remove jack storage cover.^A Locate the vehicles factory tow [harness connector](#) it will have connection points similar to the connector on the tow harness.^B


2. Insert the tow harness into the vehicles connector. Make sure the connectors are fully inserted with locking tabs in place.

3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

4. Route the 4-flat wire to the center of the vehicle and out the rear doors when in use. When not in use roll up and store in an out of the way location in the jack storage compartment.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

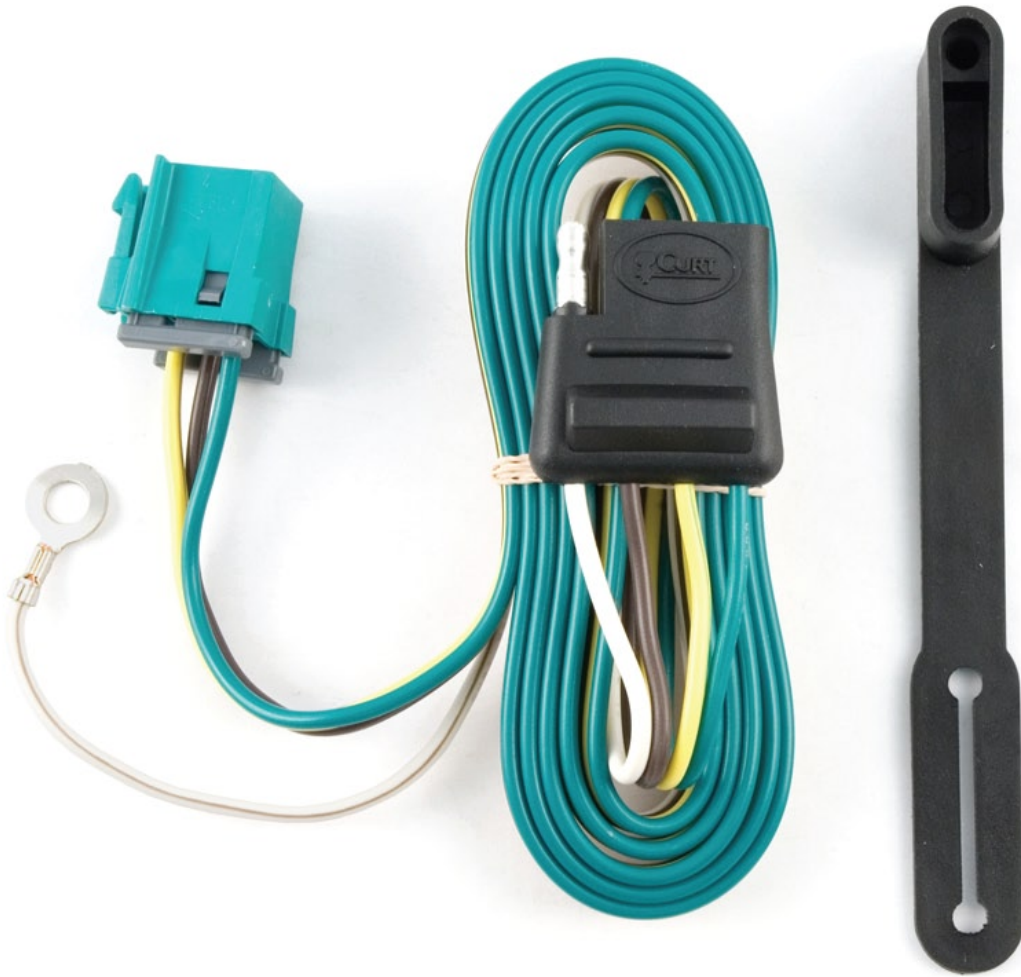

55240