

# 55311

CHEVROLET BLAZER  
CHEVROLET C/K SERIES PICKUP  
CHEVROLET SUBURBAN  
GMC BLAZER  
GMC C/K SERIES PICKUP  
GMC SUBURBAN

## WIRING LOCATION GUIDE



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



1. Locate the vehicles taillight wiring harness. It will be located behind the bumper on the drivers side frame rail. A The harness will have connectors similar to those on the [T-connector harness](#). Separate the vehicles connectors being sure not to damage the locking tabs.


2. Insert the T-connector end in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.

4. Route the 4-flat to the center of the vehicle and secure in a convenient out of the way location. Secure any loose wires with the cable ties provided.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.

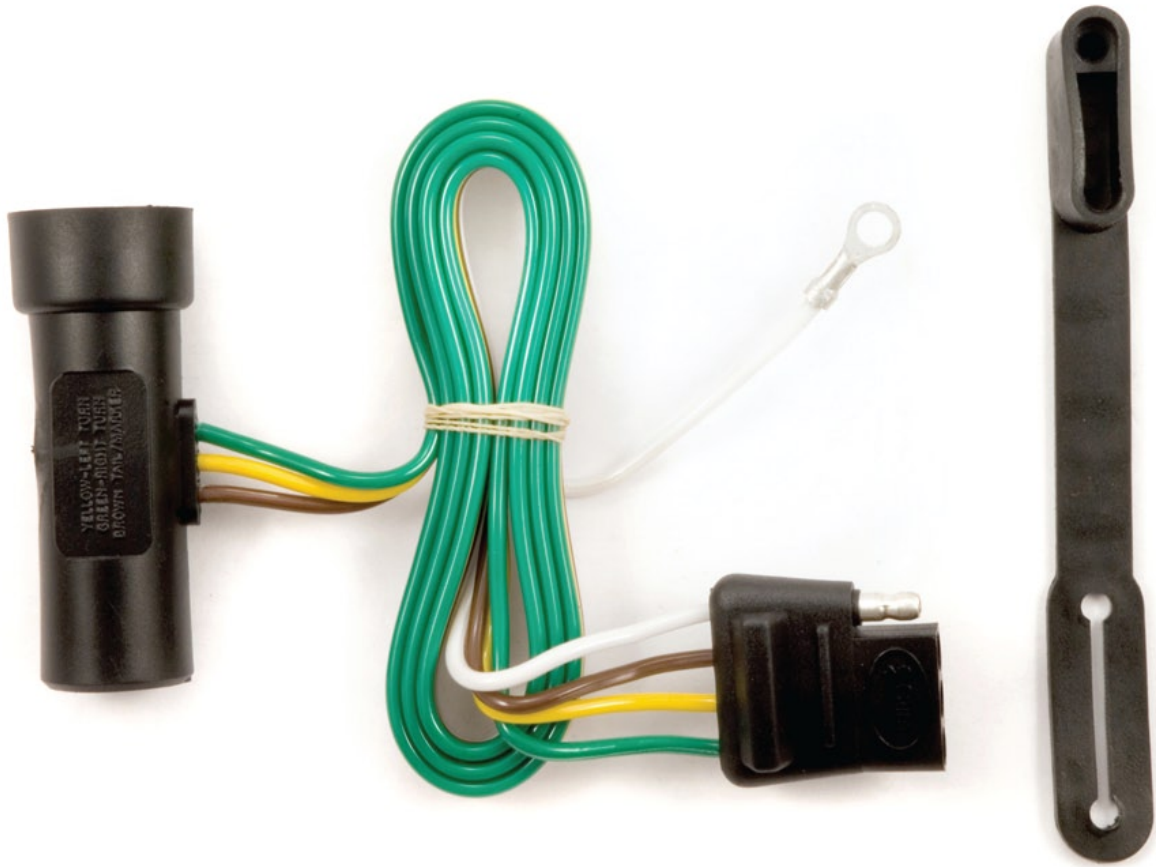

55311