

# 56107

TOYOTA HIGHLANDER




## WIRING LOCATION GUIDE



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

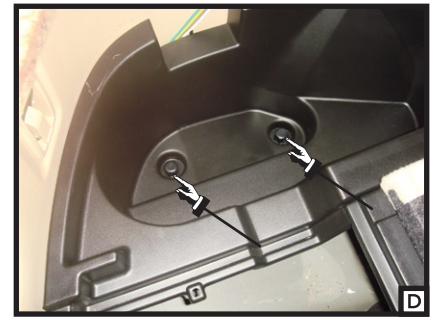

1. Open the rear hatch and remove the vehicles rear cargo area cover. [A] Remove the rear storage tray by lifting up and pulling out. [B] Remove rear scuff panel by removing plastic fasteners holding it in place. [C] Remove drivers side storage tray by removing two plastic nuts holding it in place. [D]

2. Under the storage compartment locate the vehicles trailer tow connector. [E] It will mate with the connector on the harness. Insert connector into vehicles connector, make sure the connectors are fully inserted with locking tabs in place. [F]

3. Adhere the black converter box to the frame of the car using the double-sided tape provided. [F] Secure any loose parts of the [T-connector](#) with the cable ties provided.

4. Re-install the drivers side cargo tray routing the 4-flat between the cargo tray and the drivers side rear trim panel. Route the 4-flat wire to the center of the vehicle and out the trunk when in use. When not in use roll up and store in the rear cargo tray. Re-install anything removed during install.

5. Some vehicles may require the installation of a 20 amp mini fuse in the TOWING position of the fuse panel to function properly. Locate the fuse panel under the hood at the driver side and install a 20 amp mini fuse if necessary.



56107