

INSTALLATION INSTRUCTIONS

51522 APPLICATIONS

Make	Model
Audi	SQ5
Audi	Q5
Audi	Q7

BRAKE CONTROL HARNESS



NOTICE

All steps must be followed to ensure the CURT brake control harness will function properly. Once installed, test for proper function by following the brake control unit instruction manual.


TOOLS NEEDED

Ratchet	Panel trim removal tool
8mm socket	Cutting tool
Socket extension	

LOCATION GUIDE

Representative vehicle shown below

BH2 - Under dash, left of steering column, near emergency brake pedal

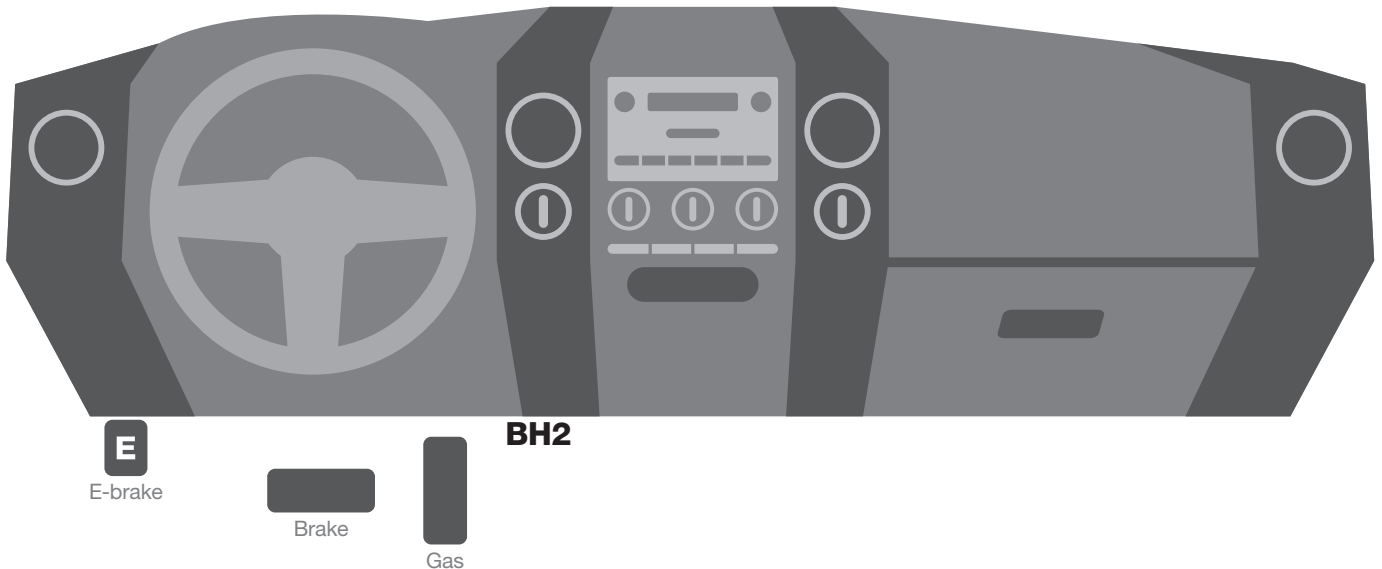

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Open the driver-side door. Locate and remove the side trim panel from the dash to gain access to the bolt securing the lower dash panel in place (A,B).

Step 2

Underneath the dash, locate the two bolts securing the lower dash panel in place (C,D).

Step 3

Locate and remove the two small trim panels on the dash, one on each side of the steering column (E,F).

Step 4

Locate and remove the bolts under the removed small trim panels that are securing the lower dash panel in place (G,H).

Step 5

Using a trim panel removal tool, remove the lower dash panel to gain access to the vehicle brake control connector (I).

Step 6

Locate the vehicle brake control harness connector underneath the removed side trim dash panel removed in step 1 (J). The connector will be similar to that on the CURT brake control harness.

Step 7

Remove any foam padding on the connector.

Step 8

Insert the connector on the CURT brake control harness into the vehicle connector. Make sure the connector is fully inserted with locking tabs in place.

Step 9

Insert the brake control harness black connector into the brake control quick plug connector. Secure the brake control harness with the provided cable ties, avoiding any pinch points.

Step 10

Reinstall all removed items during the install.

Step 11

Complete the installation using the brake control instructions. Mount the unit as directed and perform test procedures as instructed in the brake control user manual.

